

Кровать Bruno

с дополнительным спальным местом



ORMATEK


Φ1
x50




Φ2
x10




Φ3
x14



Φ4
x8



Φ5
x15




Φ6
x26




Φ7
x28



Φ8
x2



Φ9
x10

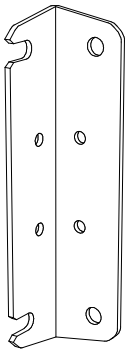

Φ10
x16




Φ11
x28




Φ12
x8



Φ13
x13




Φ14
x4

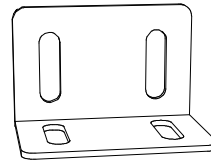

Φ15
x2



Φ16
x1




Φ17
x4





Φ18
x8














Φ19
x1

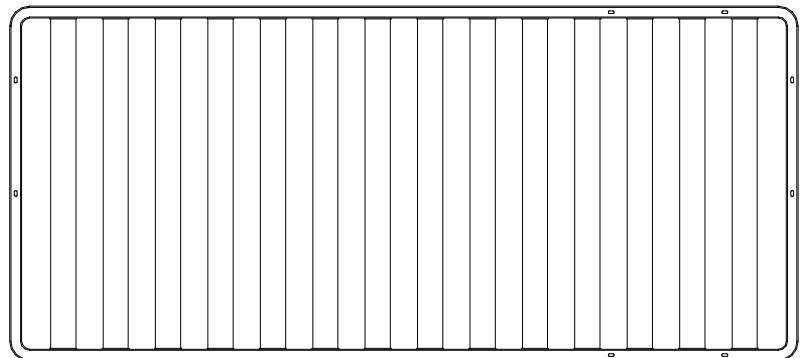

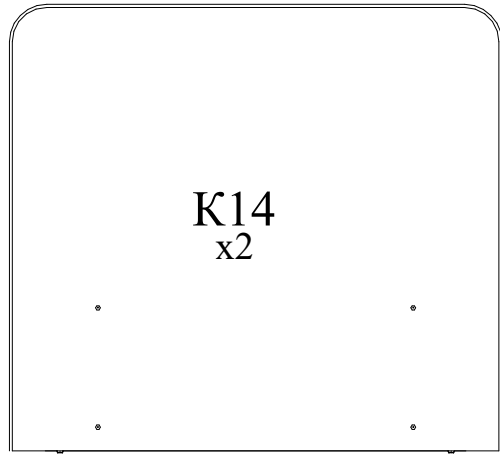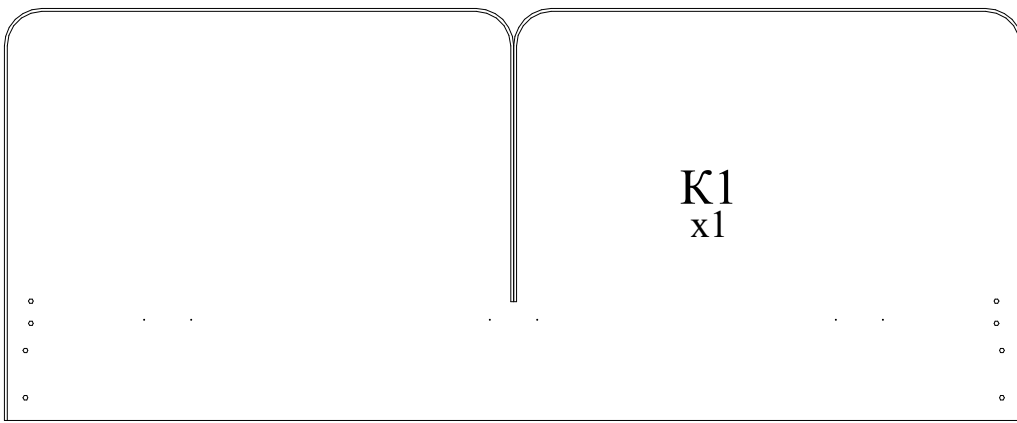


Left


Right

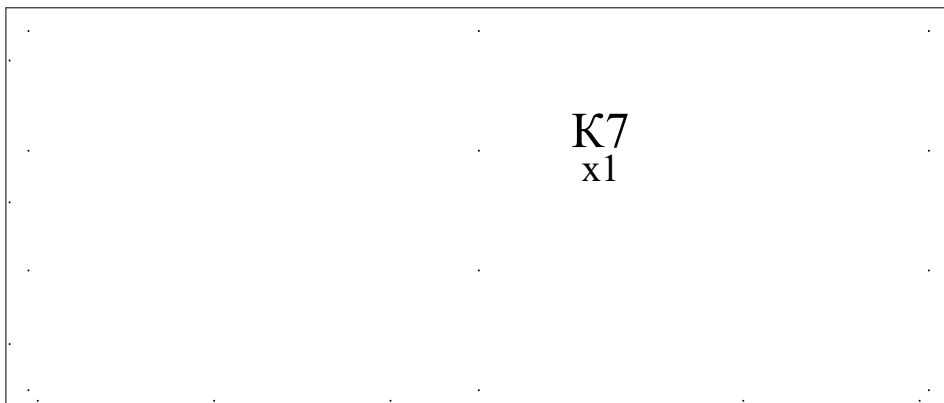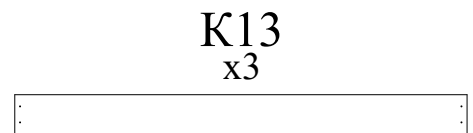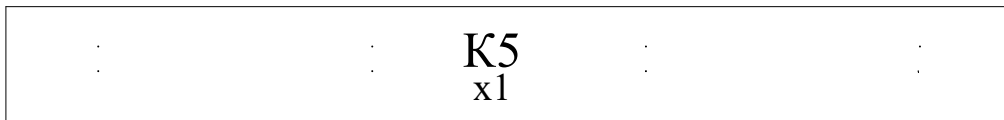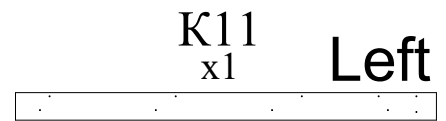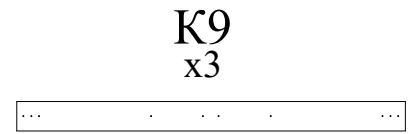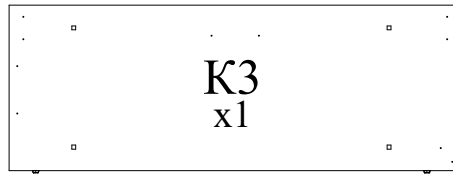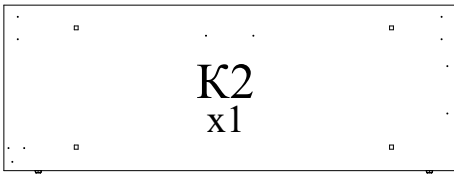


1.

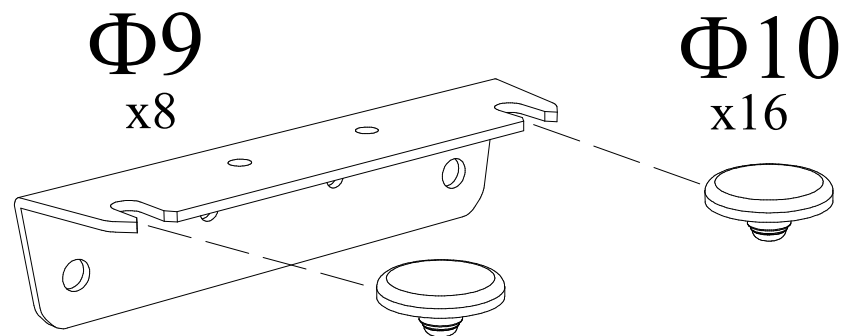


2.

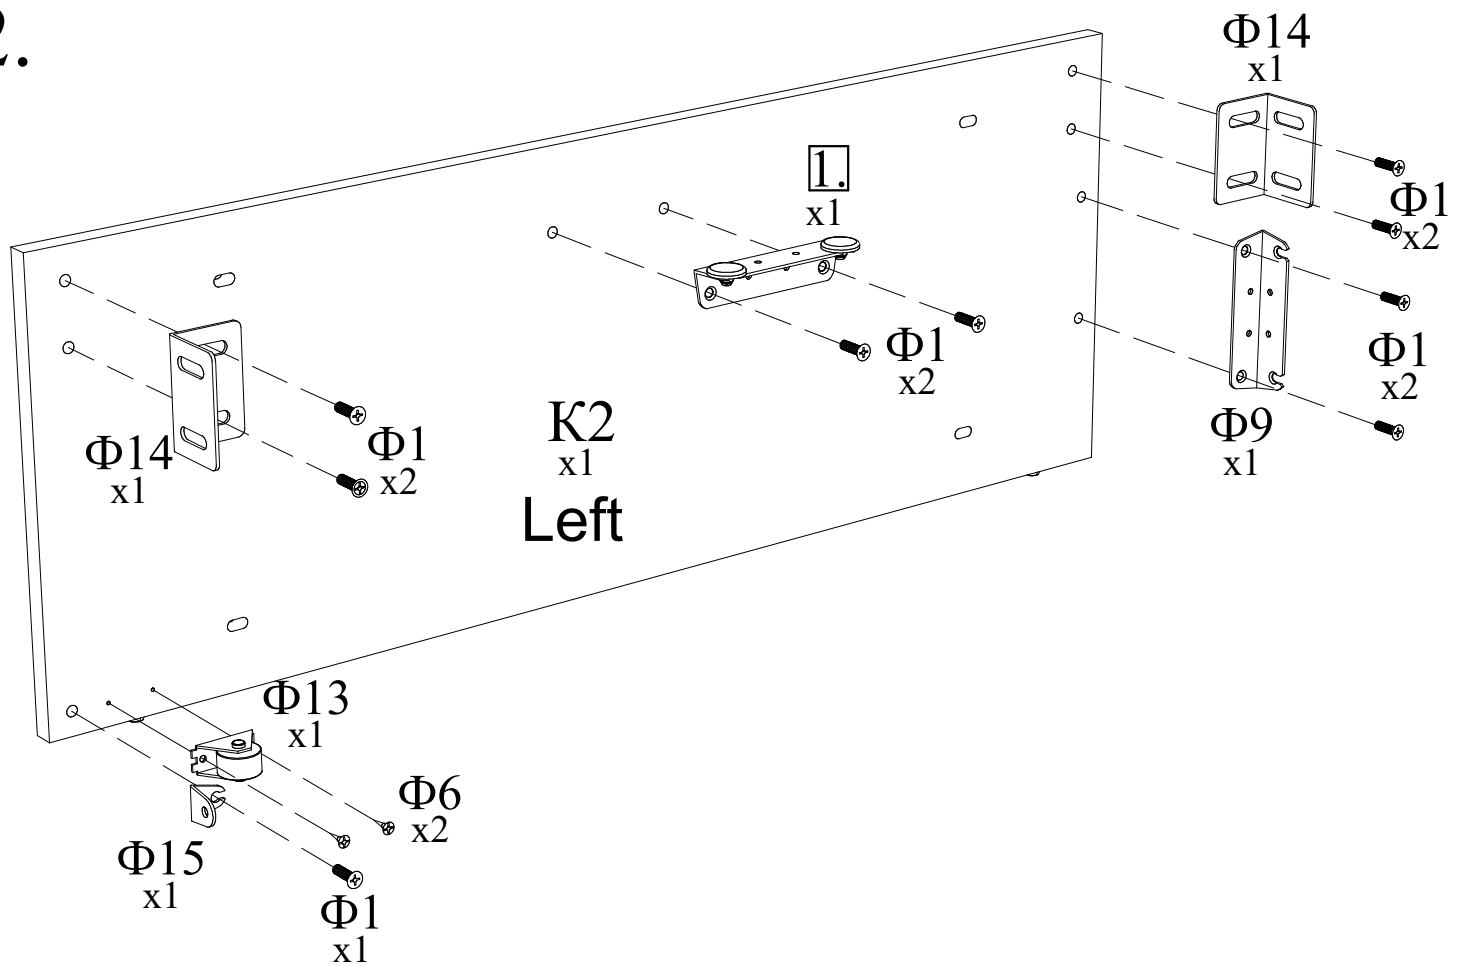


3.

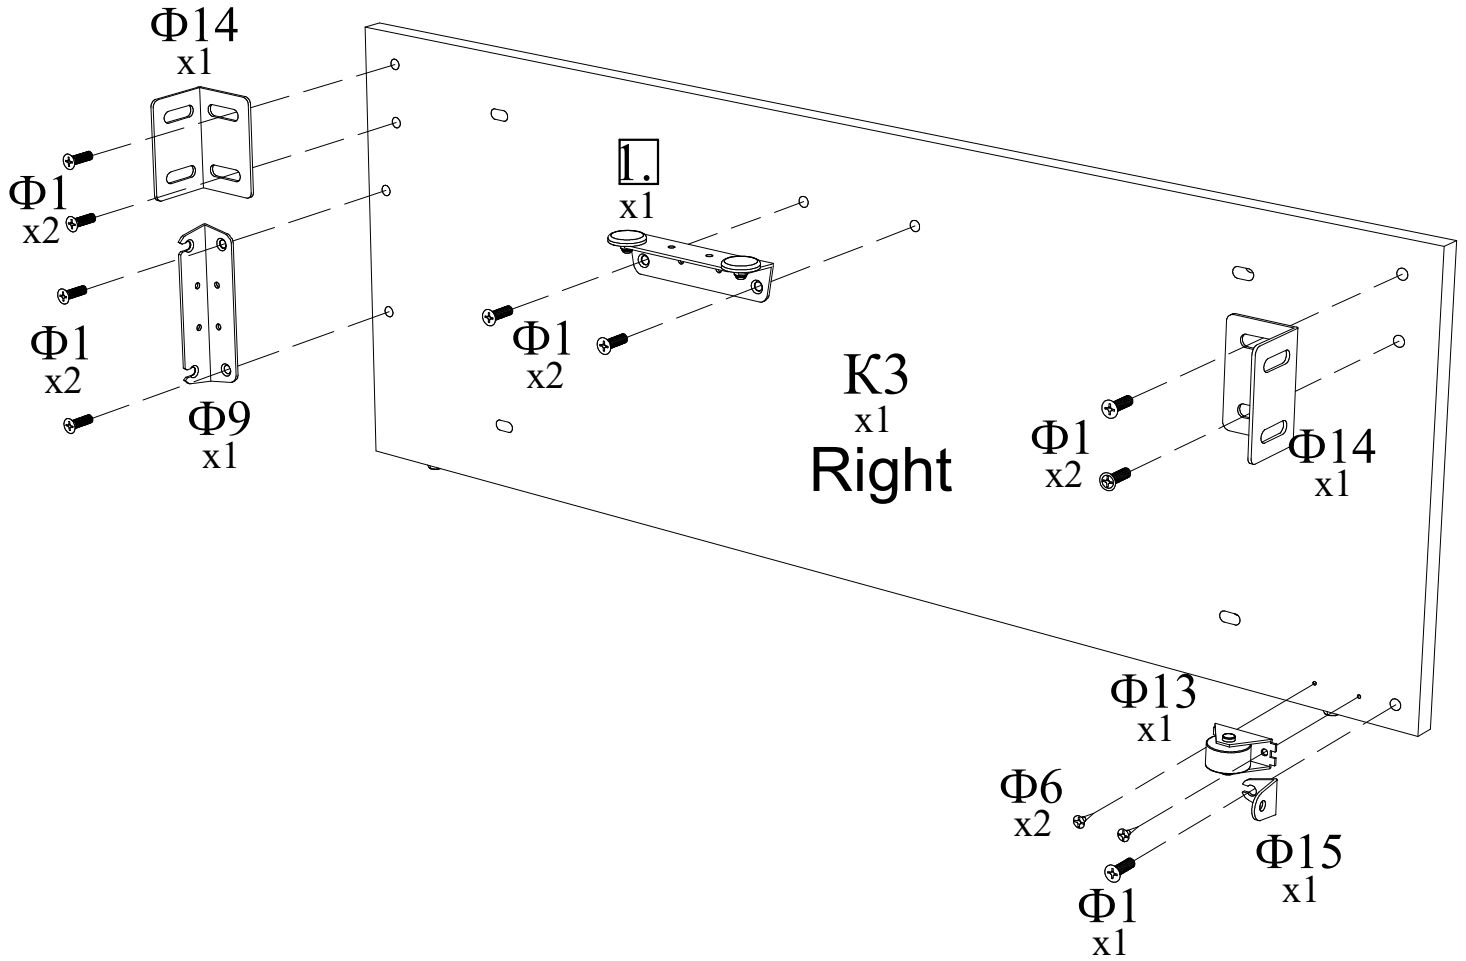


4.

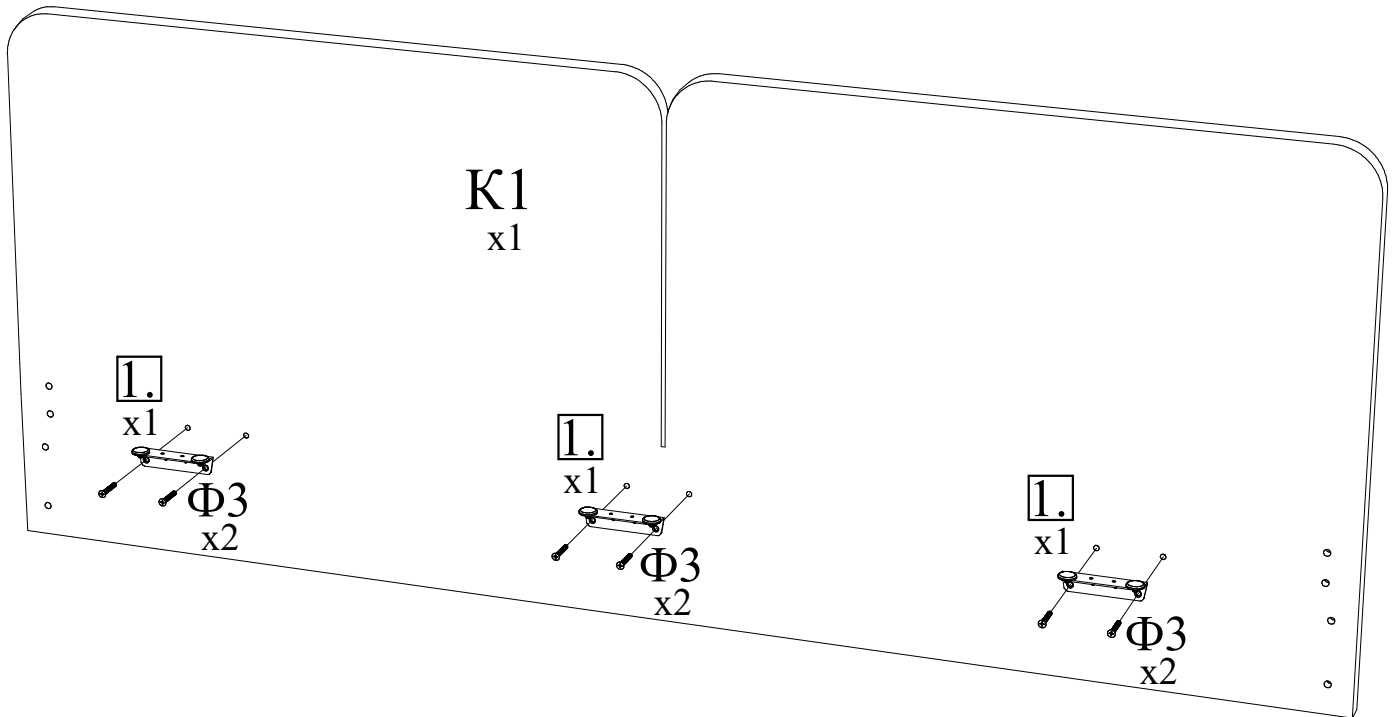


5.

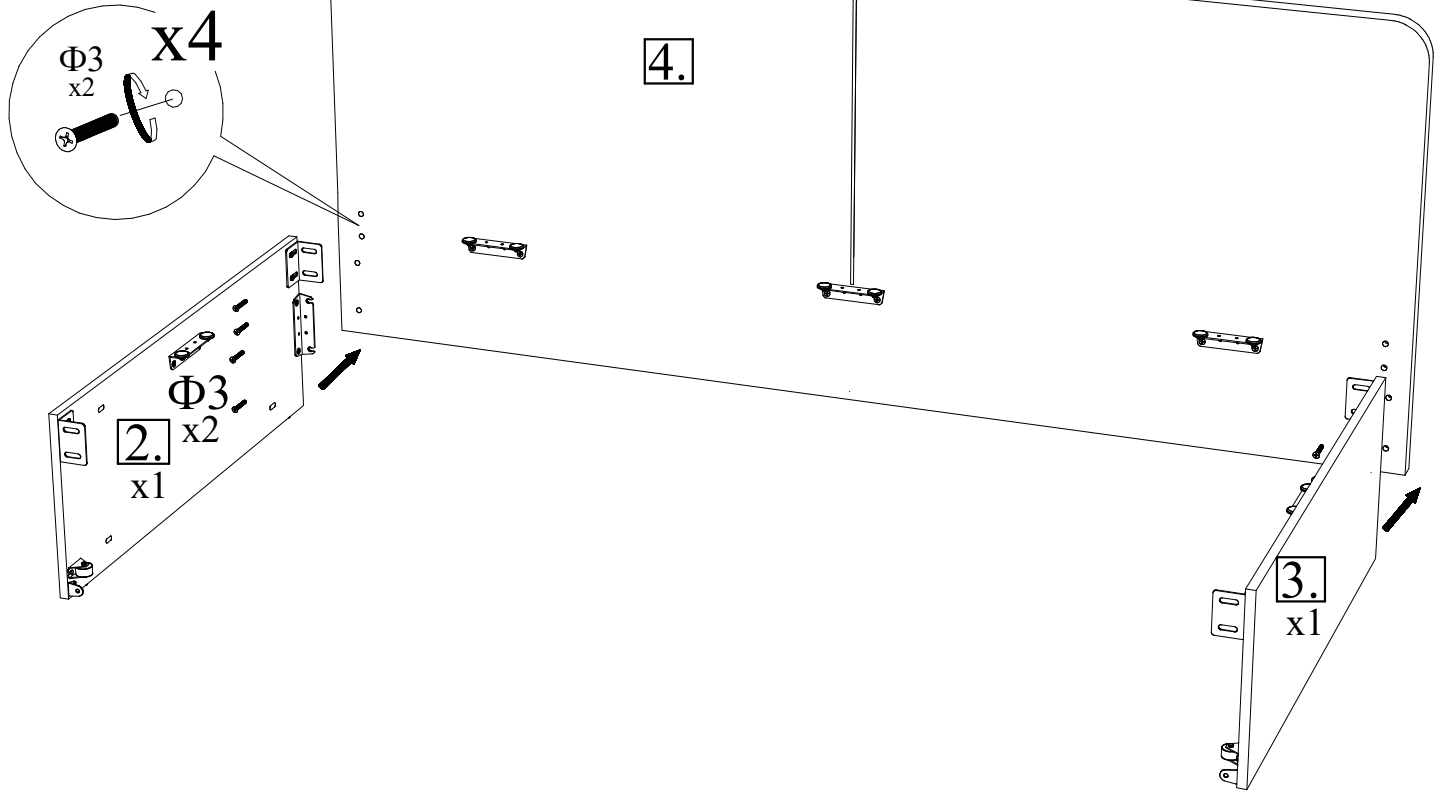


6.

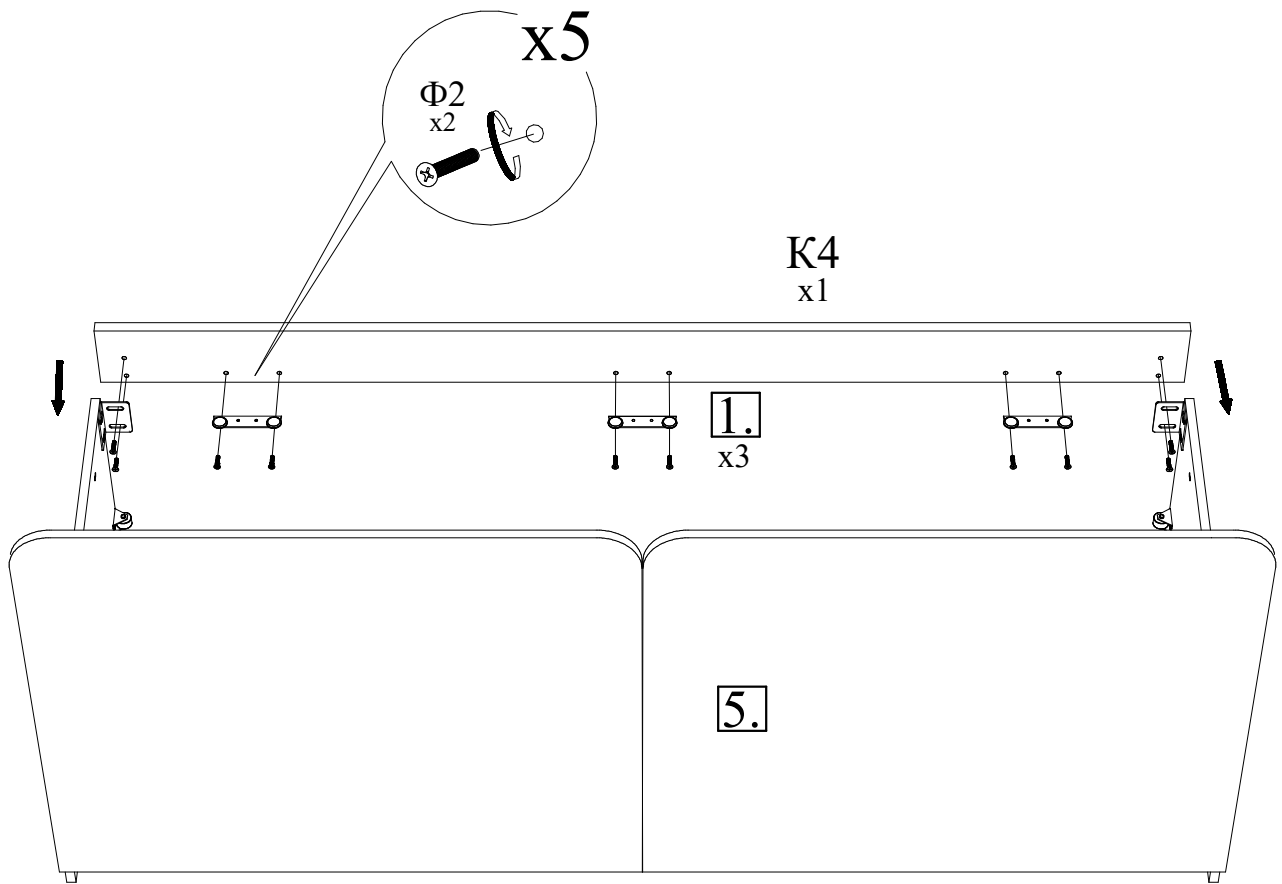


7.

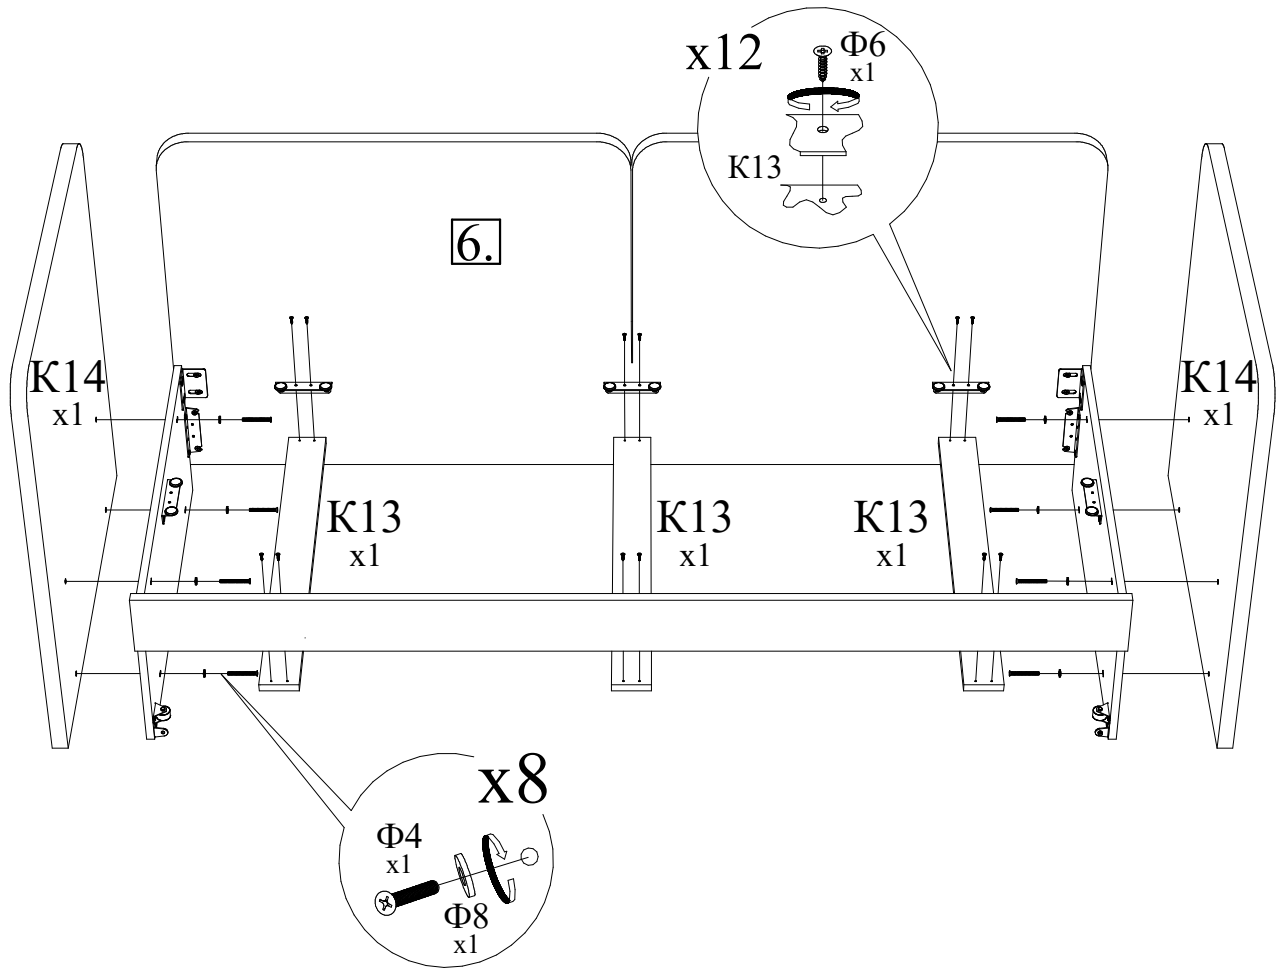


8.

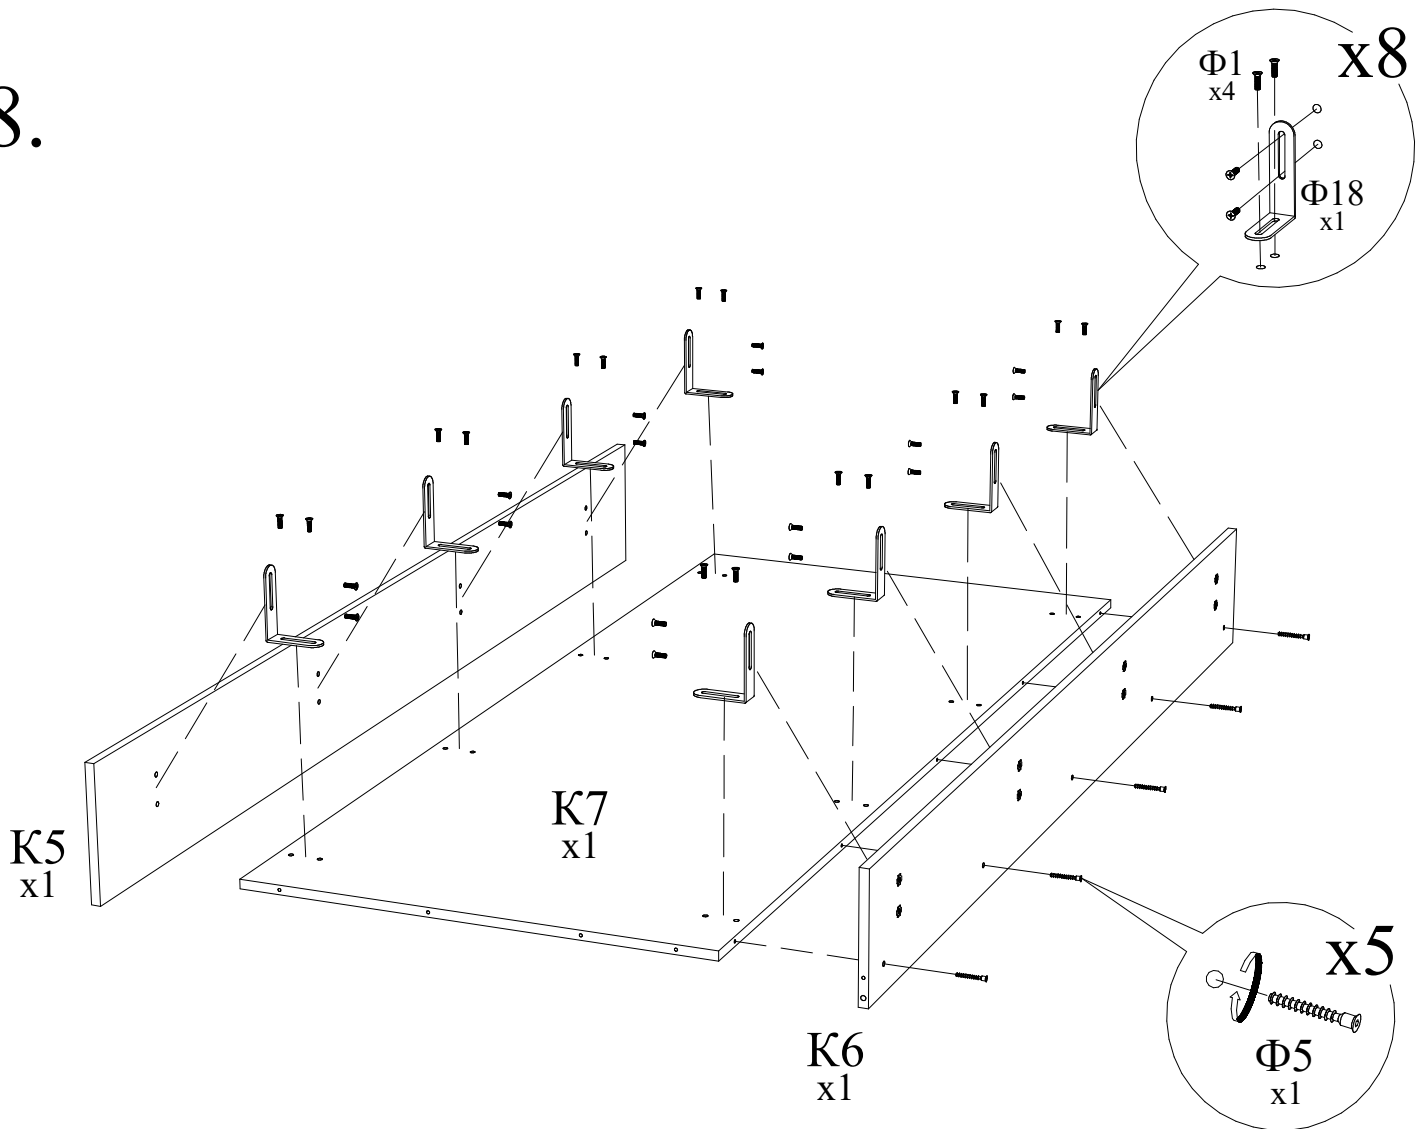


9.

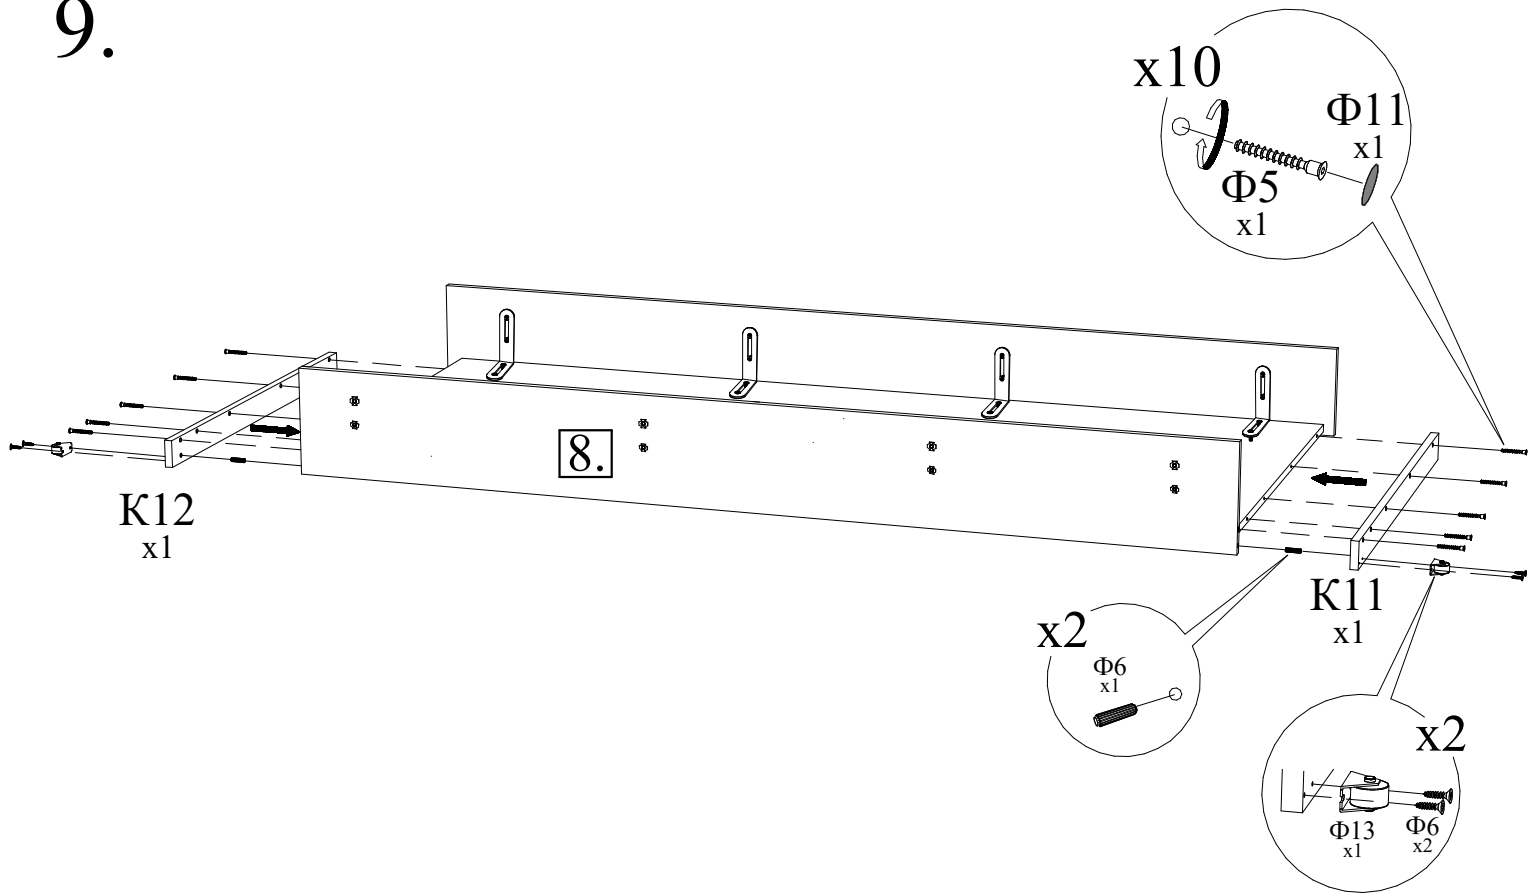


10.

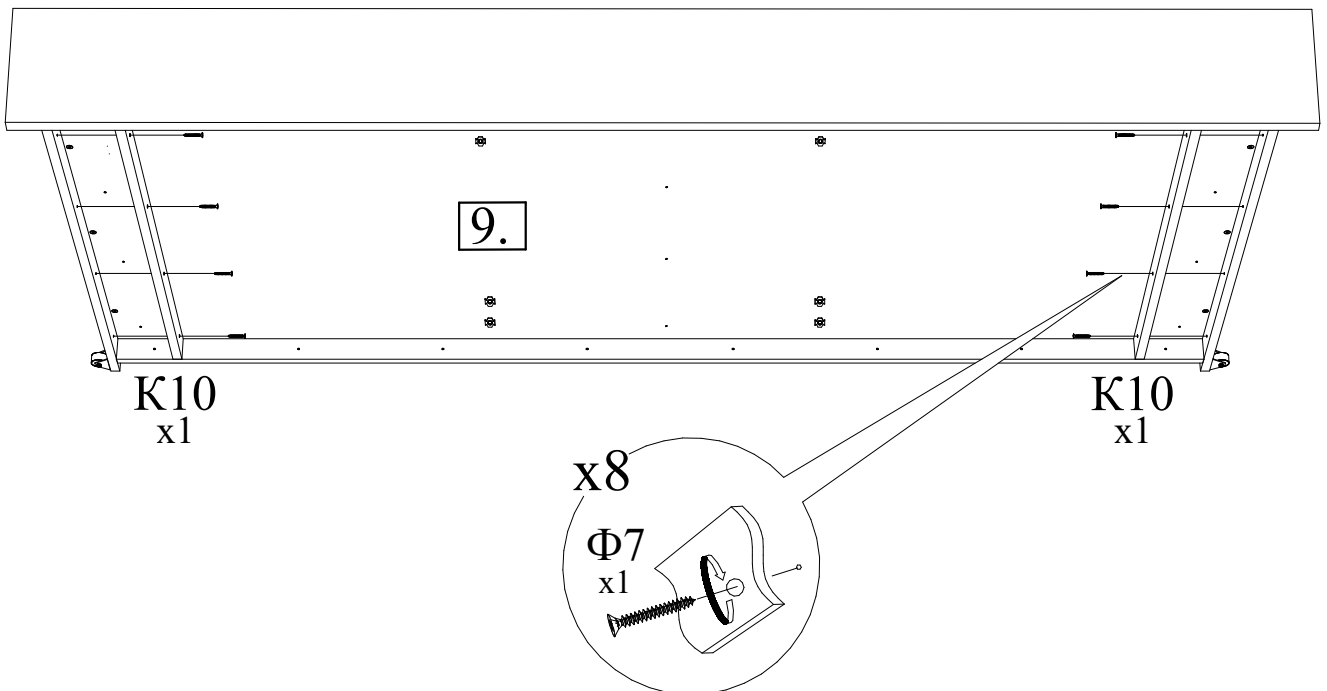


11.

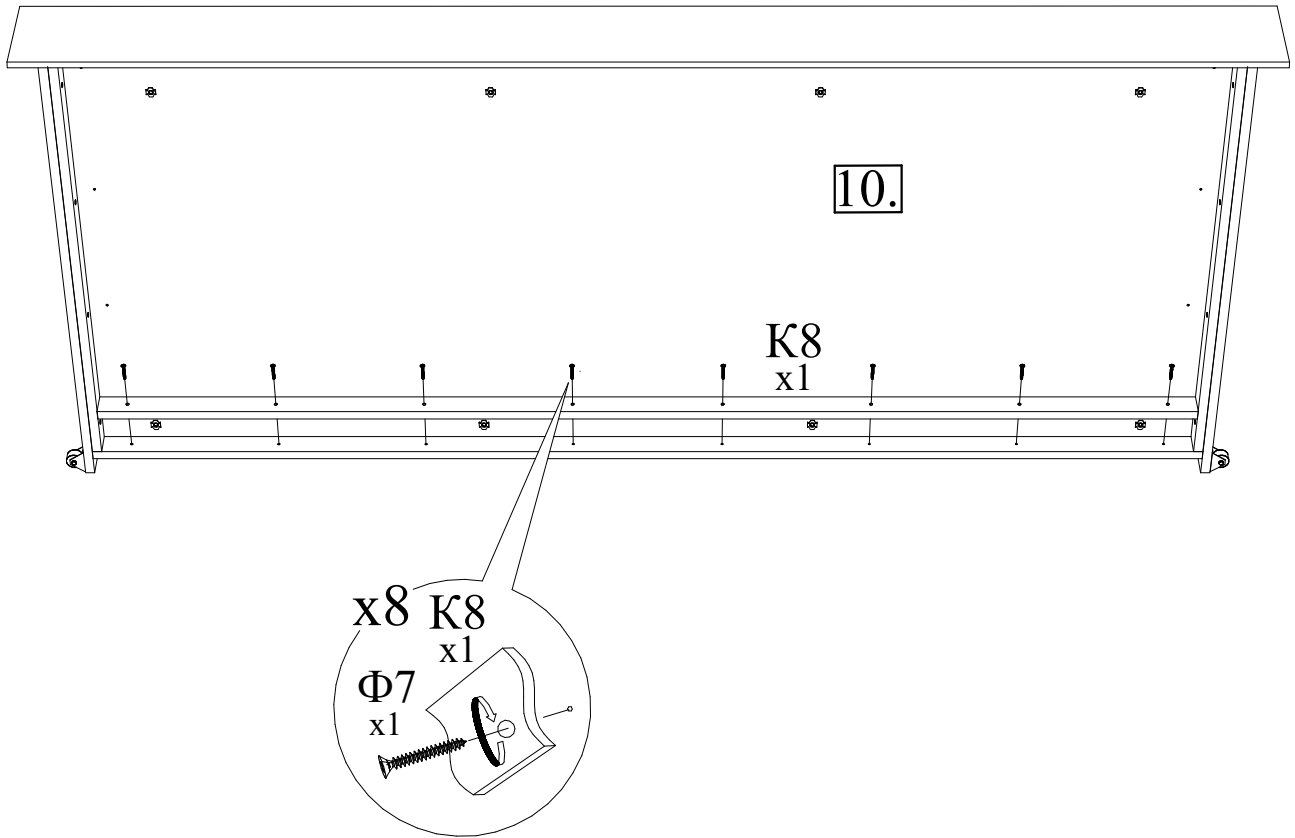

12.

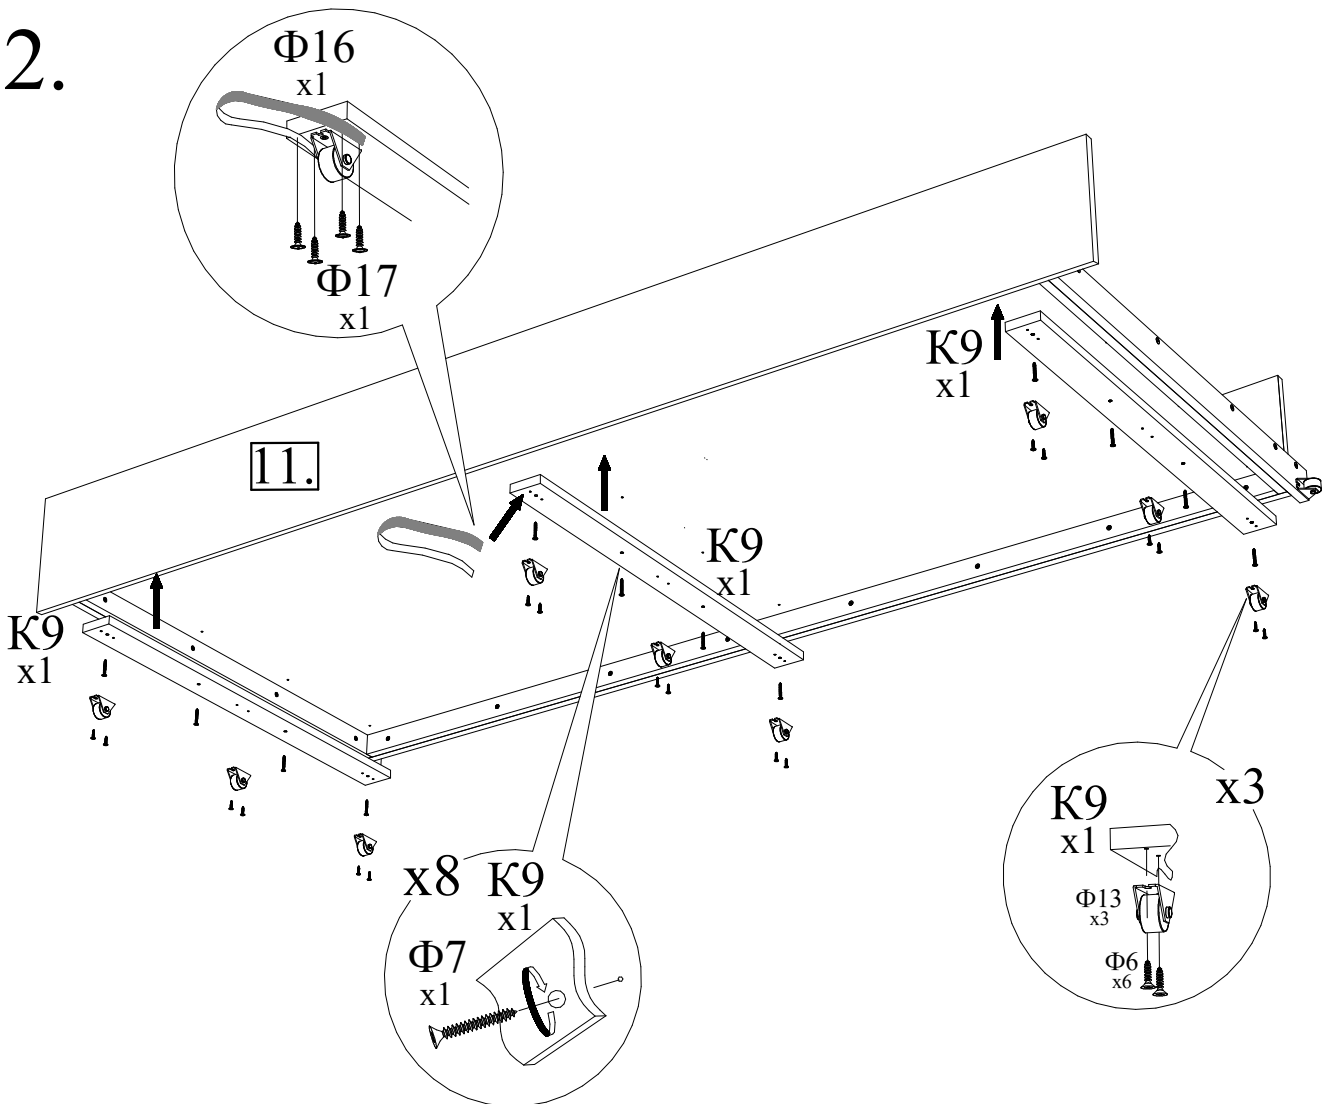

13.

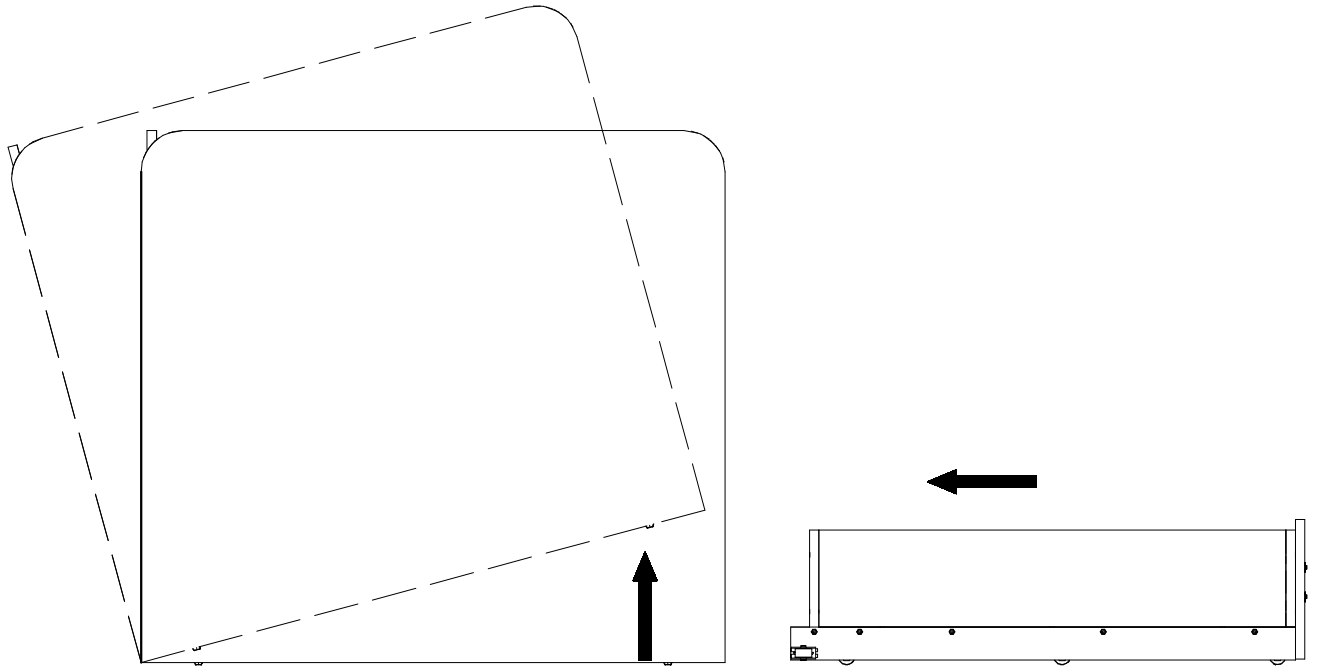

14.

