


# Кровать Bruno с подъемным механизмом




**ORMATEK**


80,90

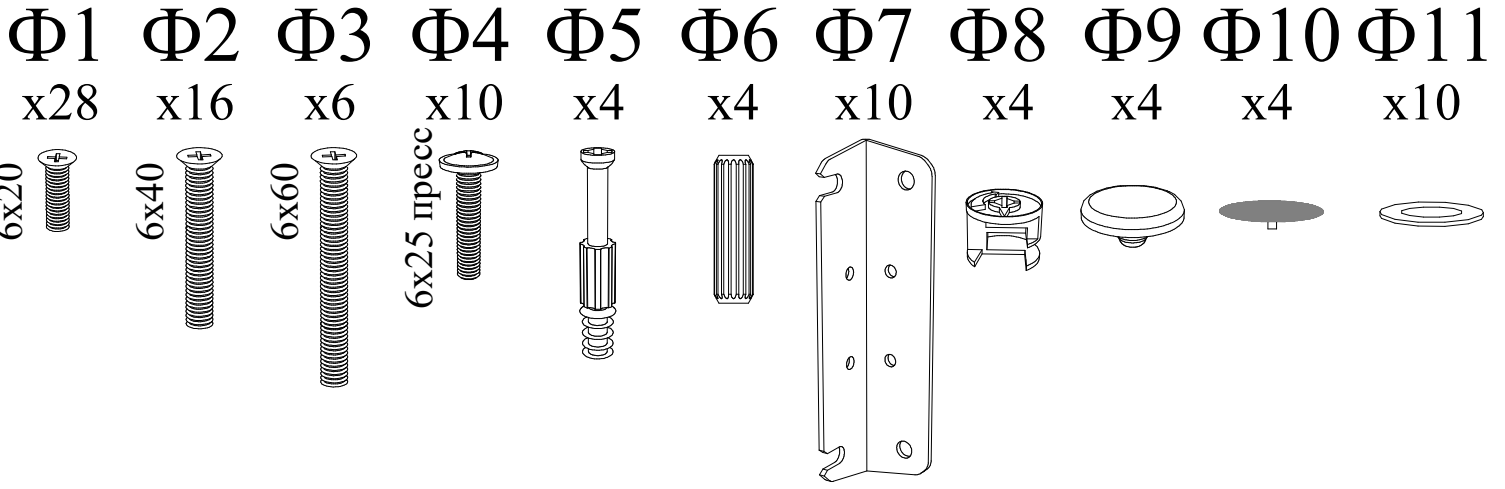


120

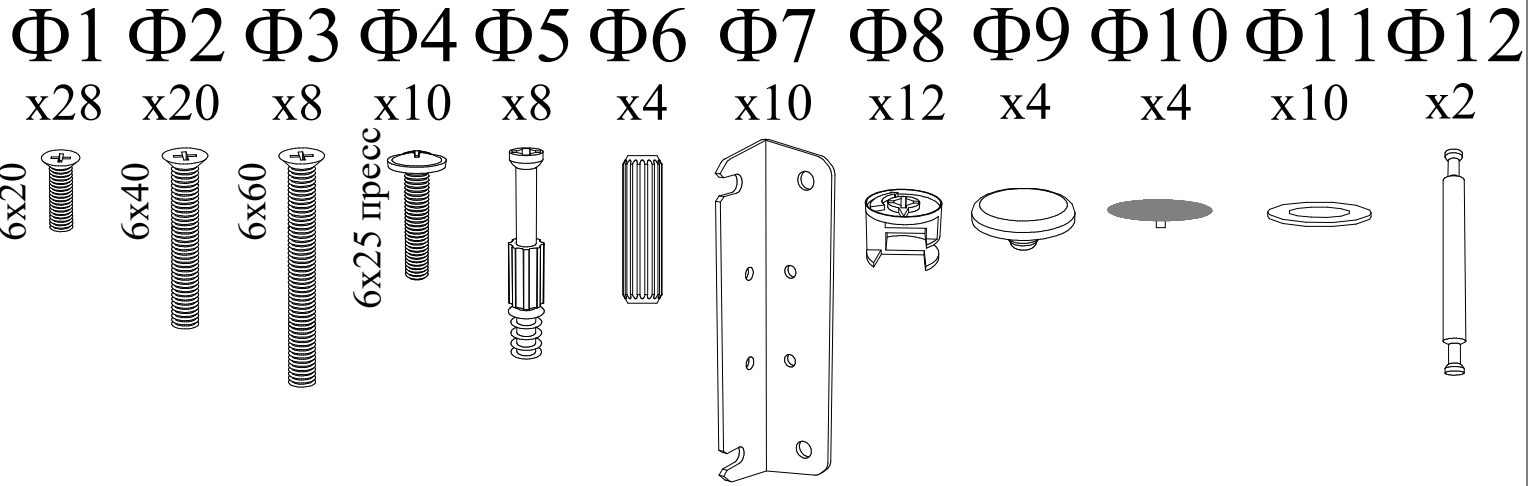

**Φ13**  
x1+1

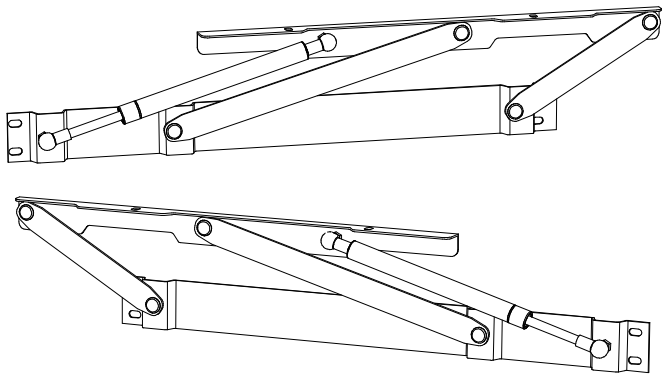

**Φ14**  
x1

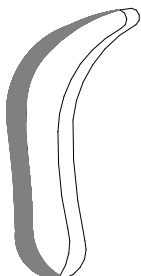


**Φ15**  
x2




**Φ16**  
x1



80,90

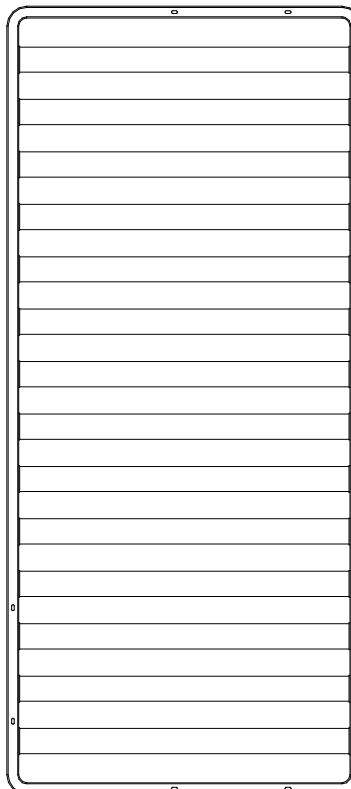

**Φ16**  
x1

120


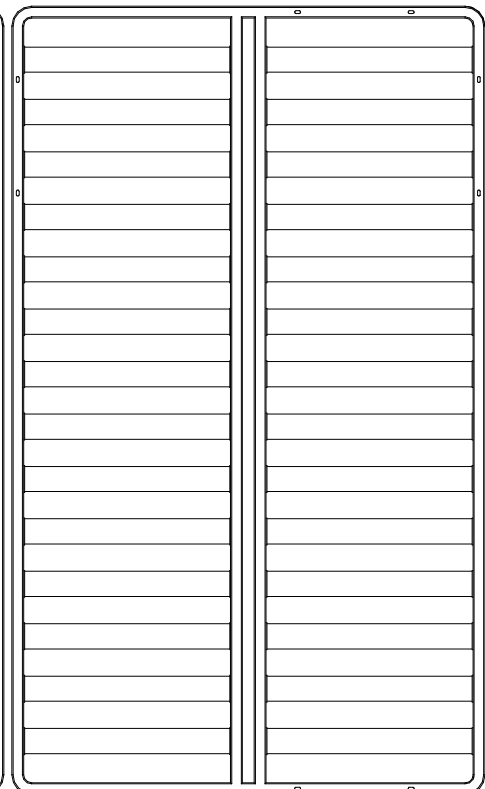


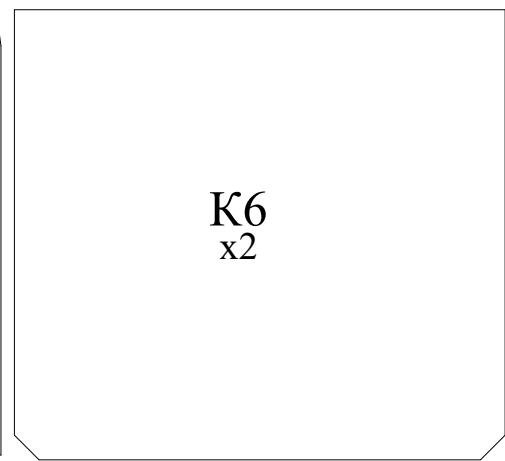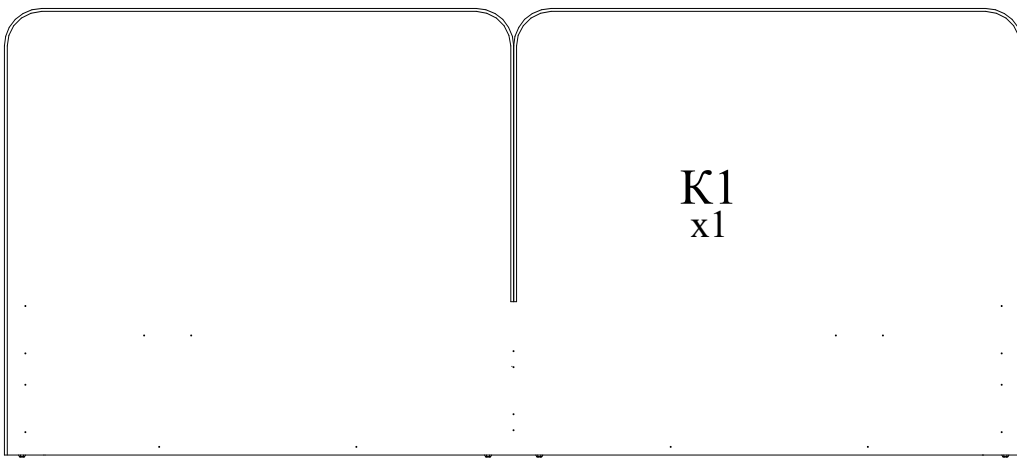

Left

80,90



Right

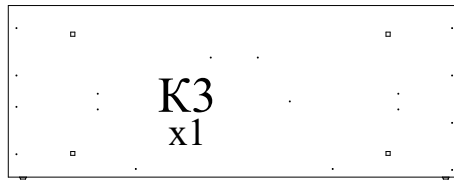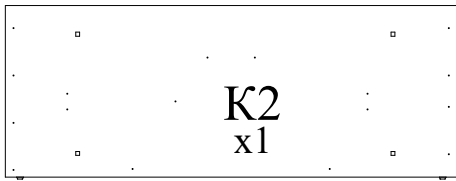

Left



120

Right

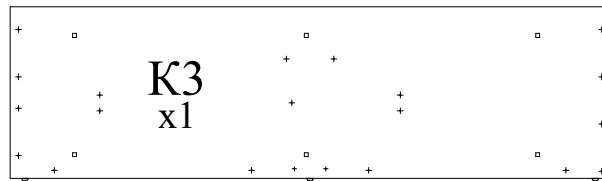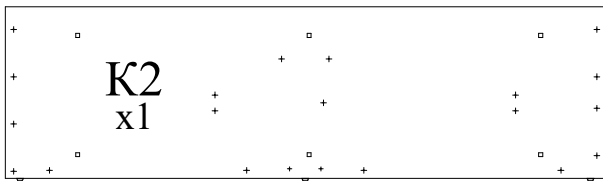

80,90

120

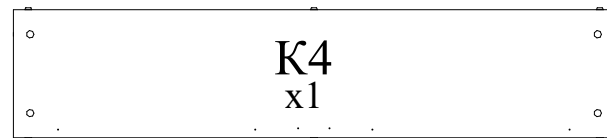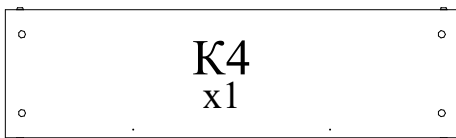

80,90

120



K7  
x7

K7  
x10


K9  
x2

K8  
x1


K8  
x2

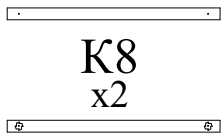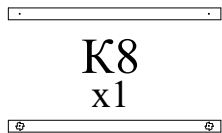


# 1. 80,90

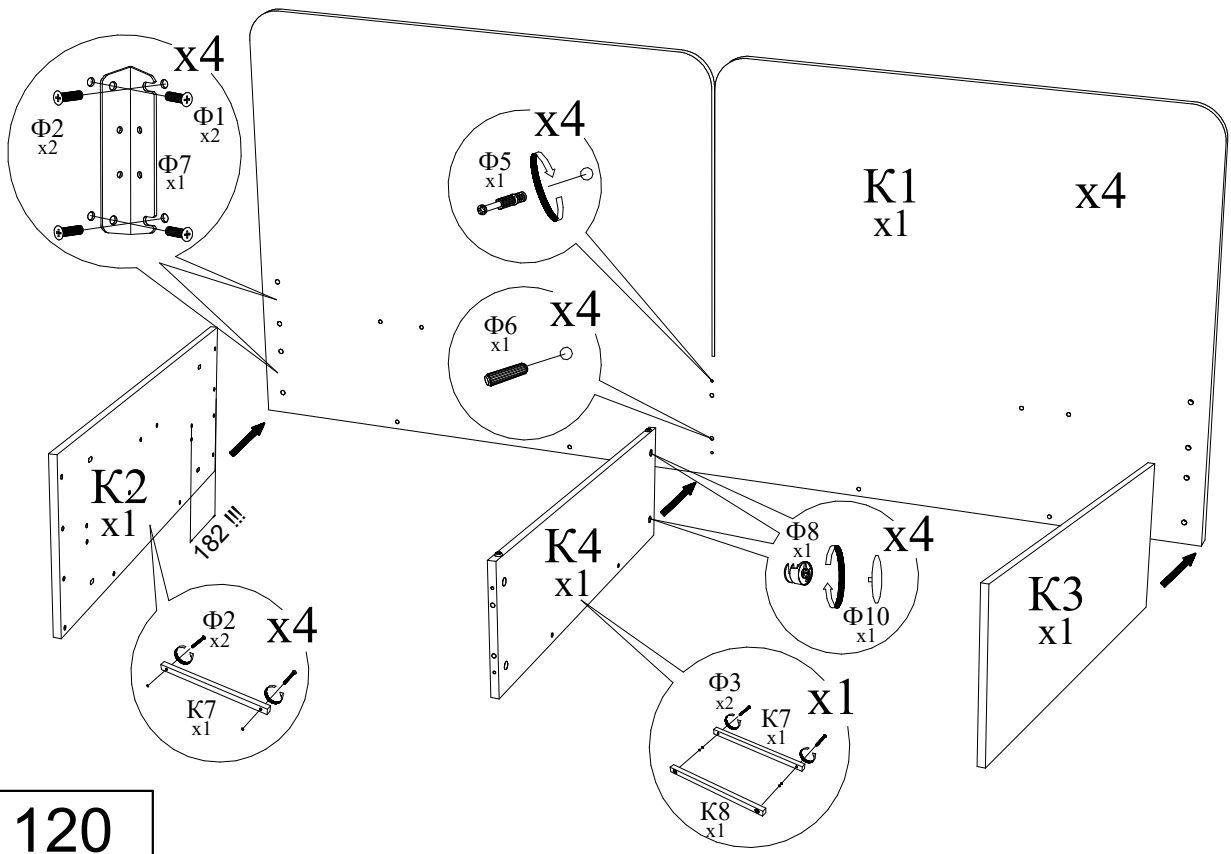


# 2. 120

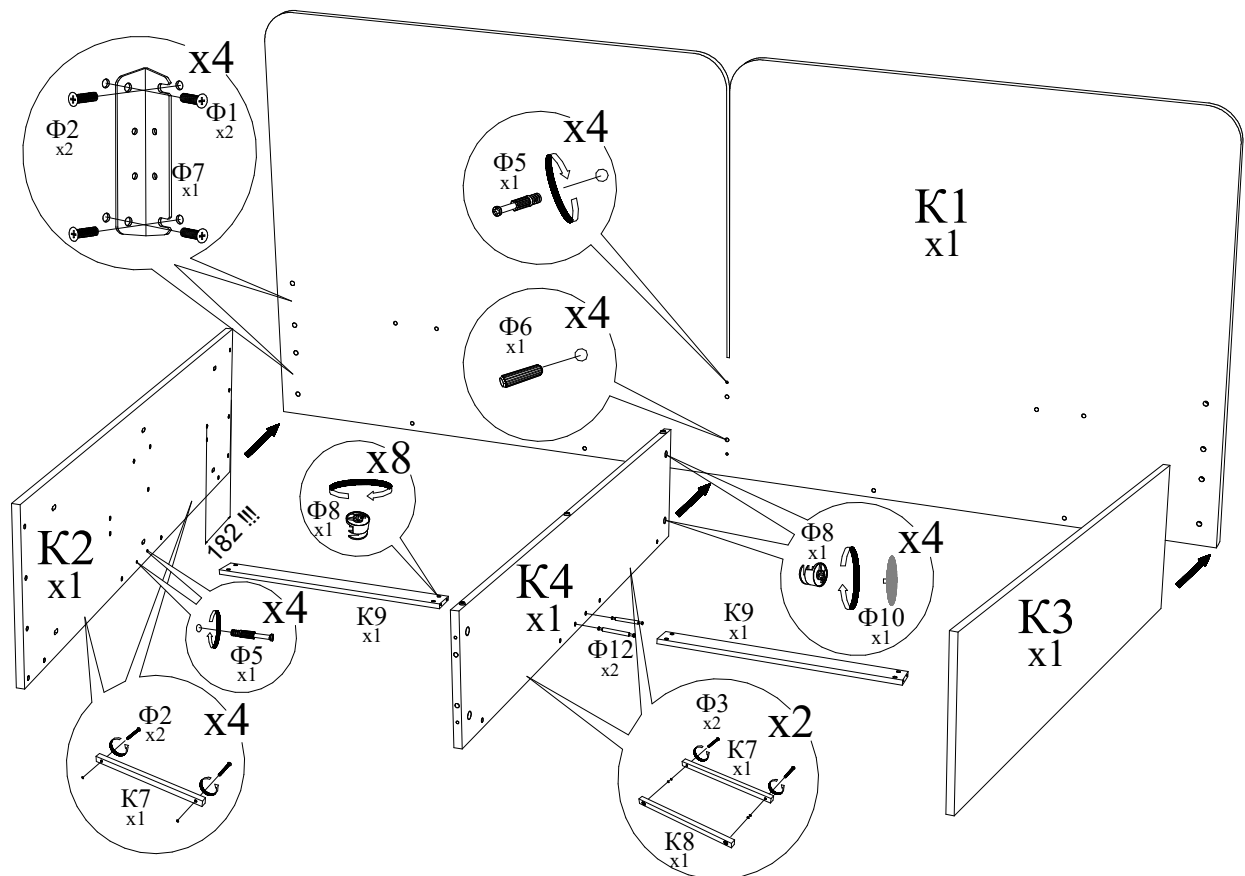

3.

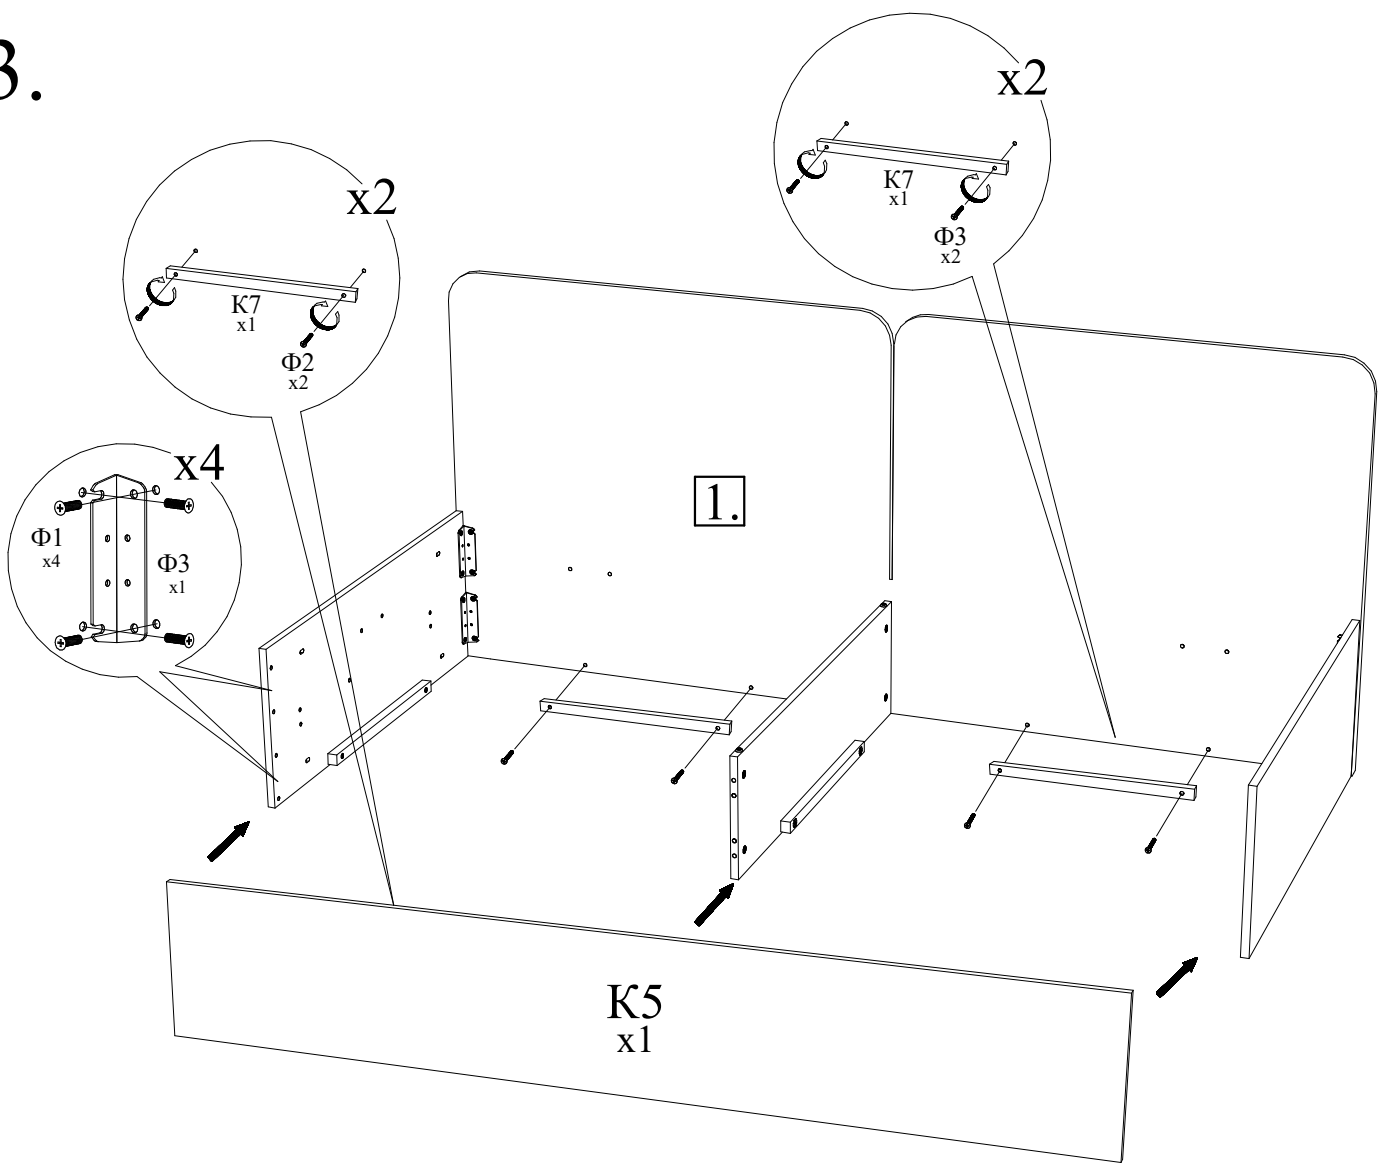


4.


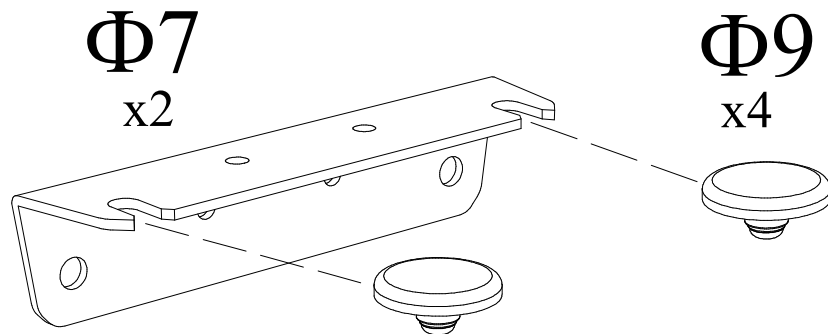


5.



ОПЦИЯ




ОПЦИЯ

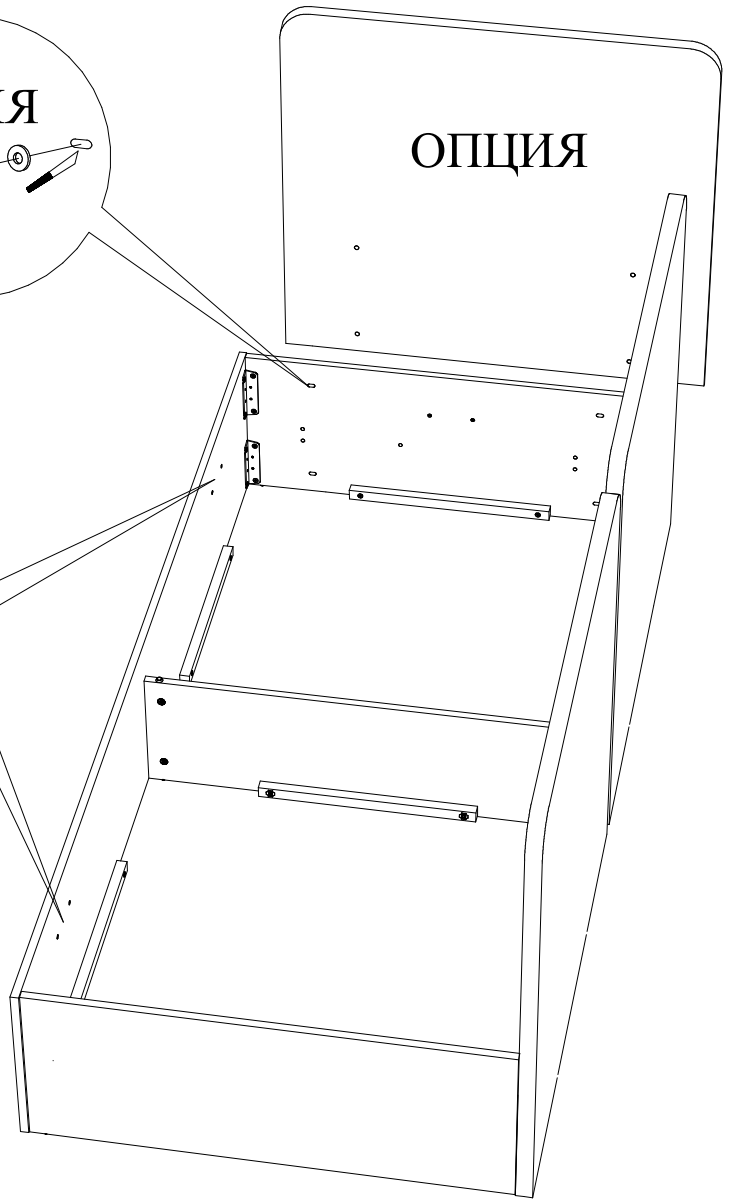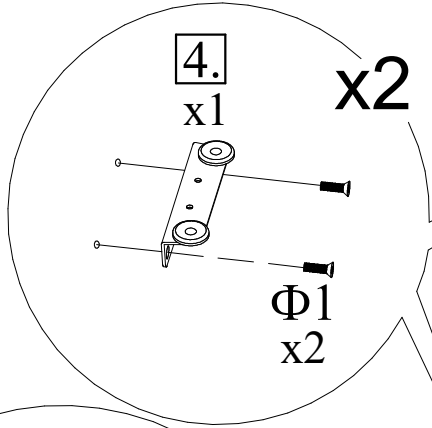


6.

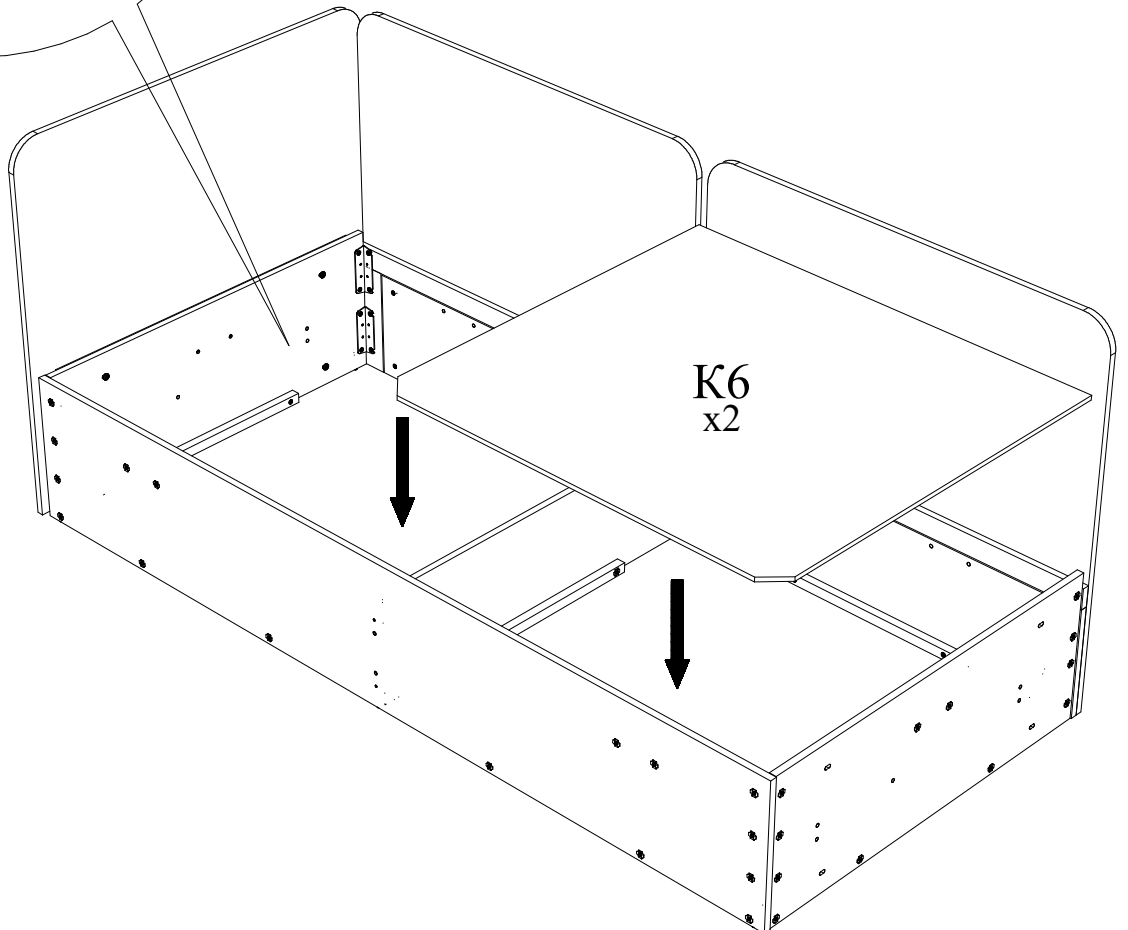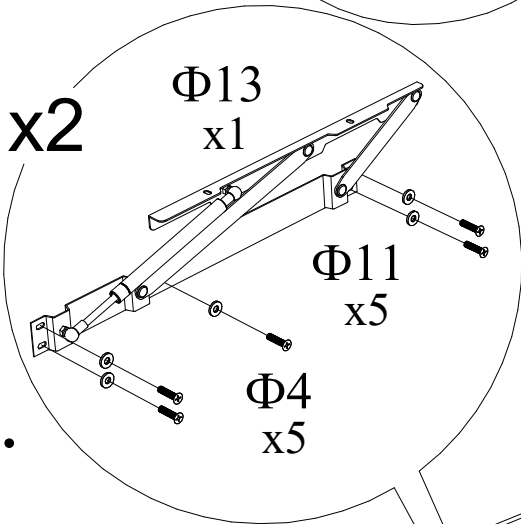


7.

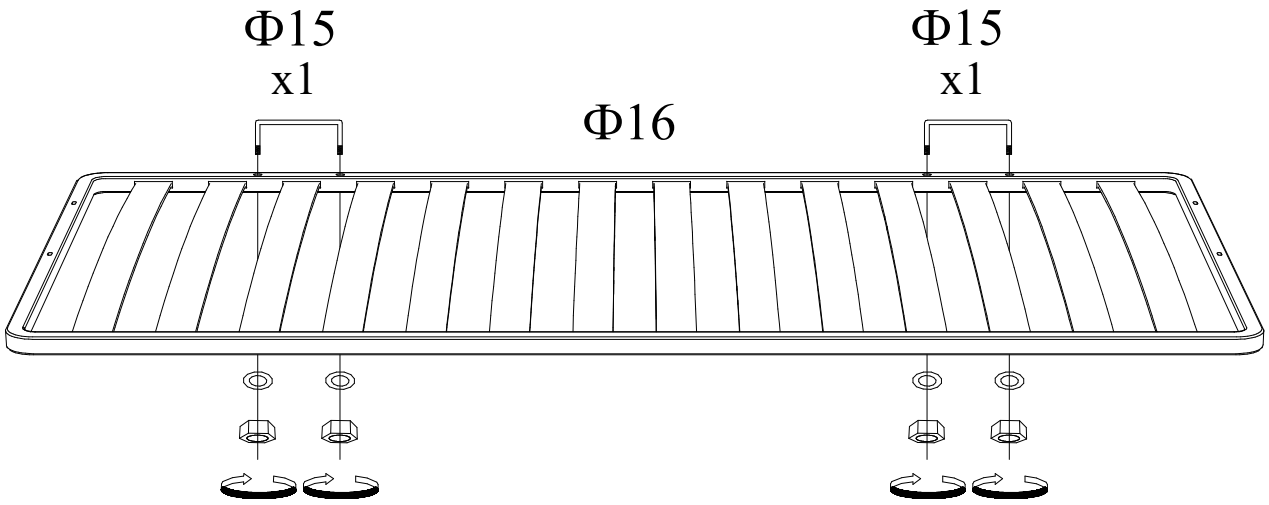

8.

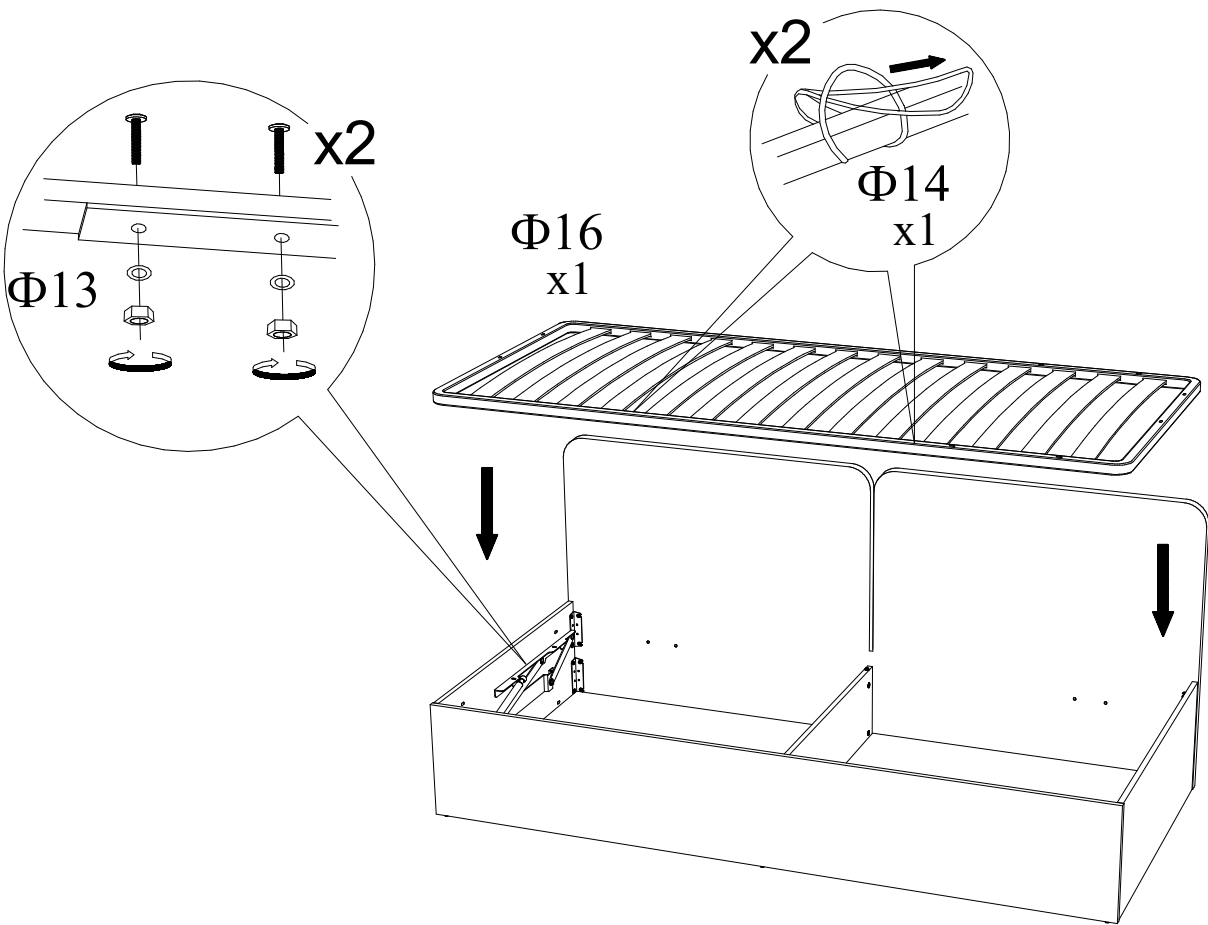

9.

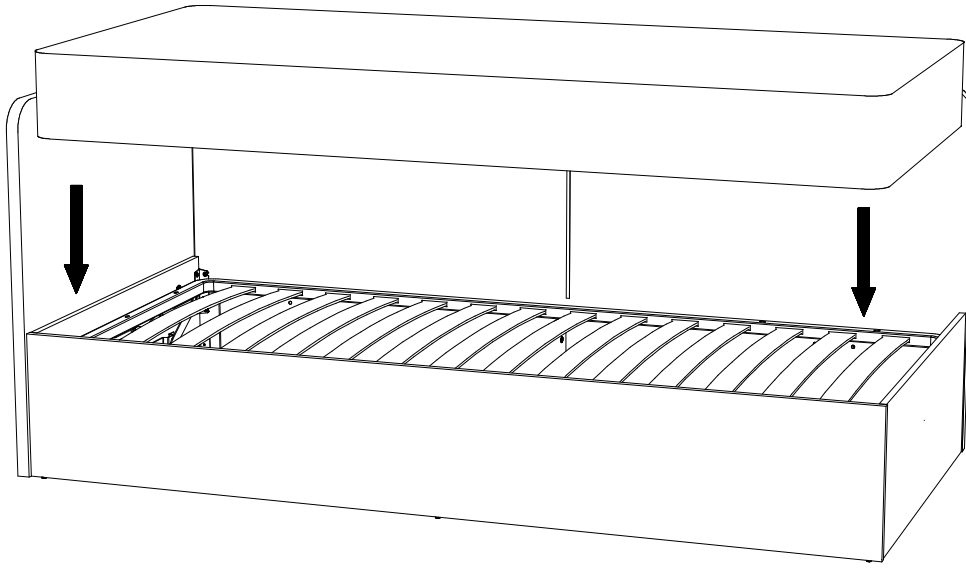

10.

