

Кровать Bruno с ВЫКАТНЫМ КОРОБОМ



ORMATEK


Φ1
x18




Φ2
x10



Φ3
x14



Φ4
x8



Φ5
x43



Φ6
x26




Φ7
x28




Φ8
x2



Φ9
x10

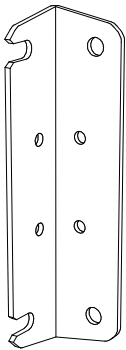

Φ10
x16




Φ11
x28




Φ12
x8



Φ13
x13



Φ14
x4

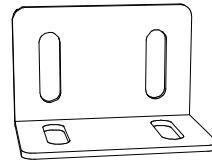

Φ15
x2




Φ16
x1





Φ17
x4

















Φ18
x1

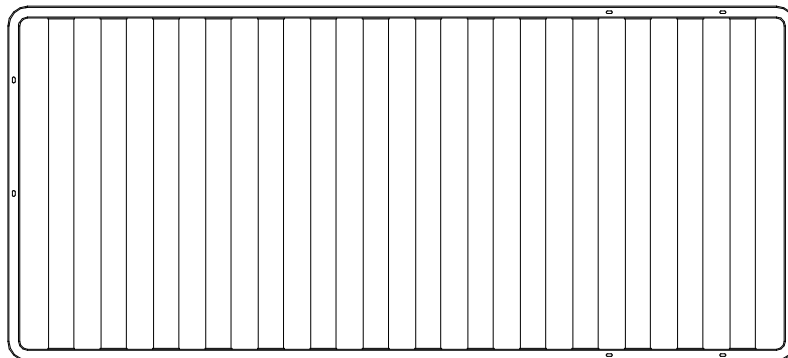

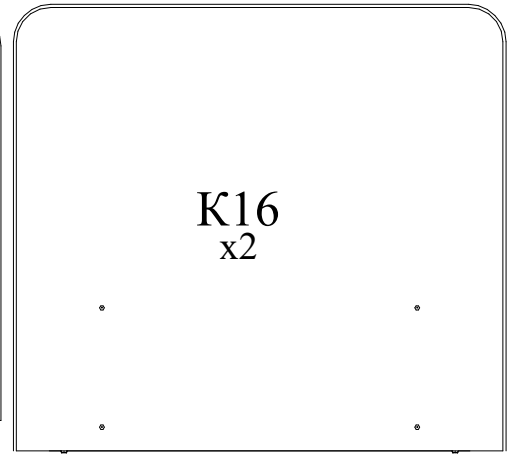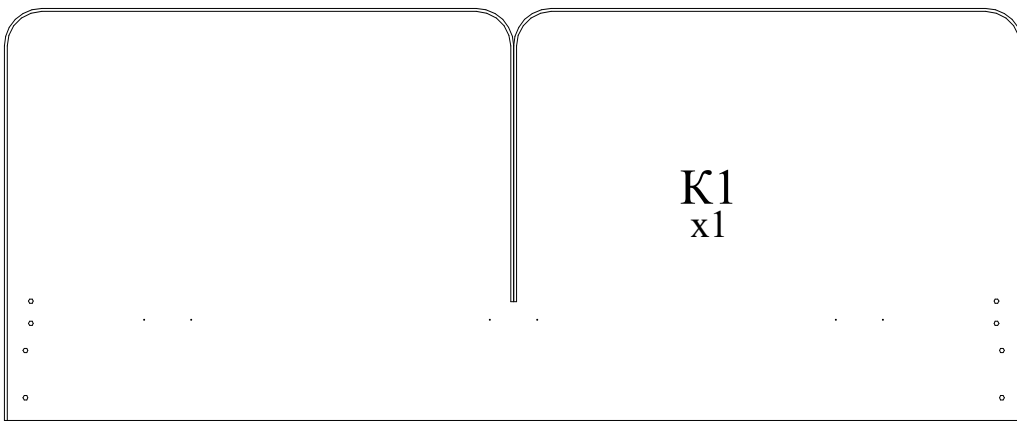


Left


Right

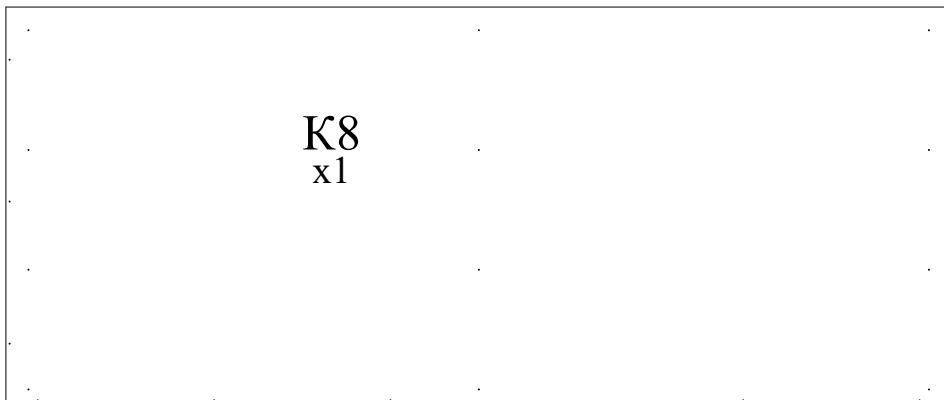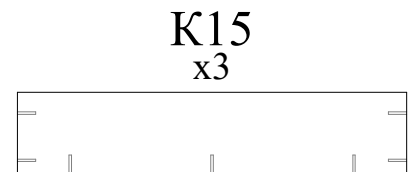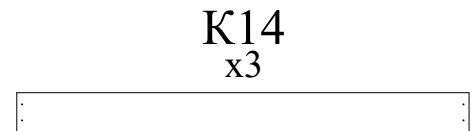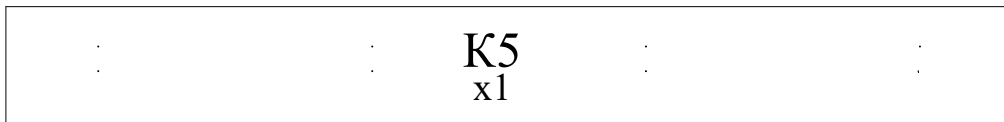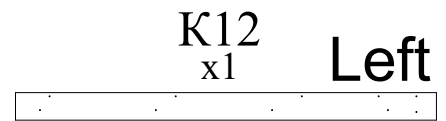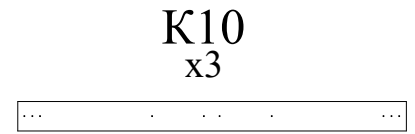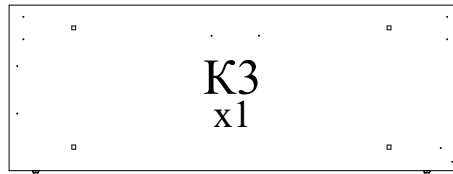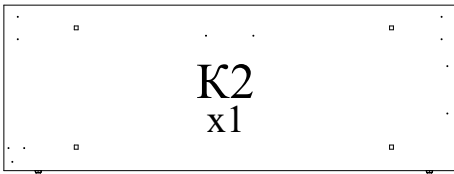


1.

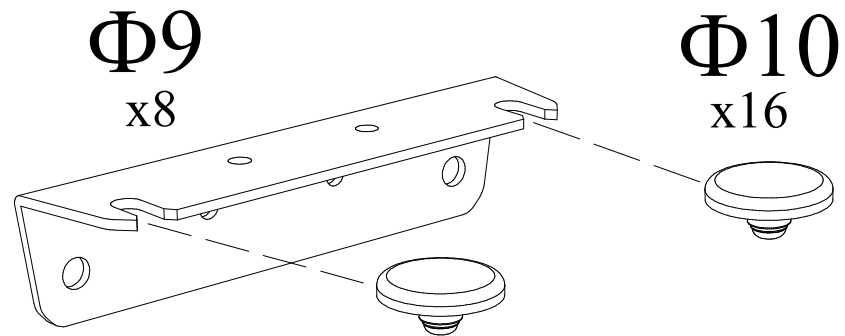


2.

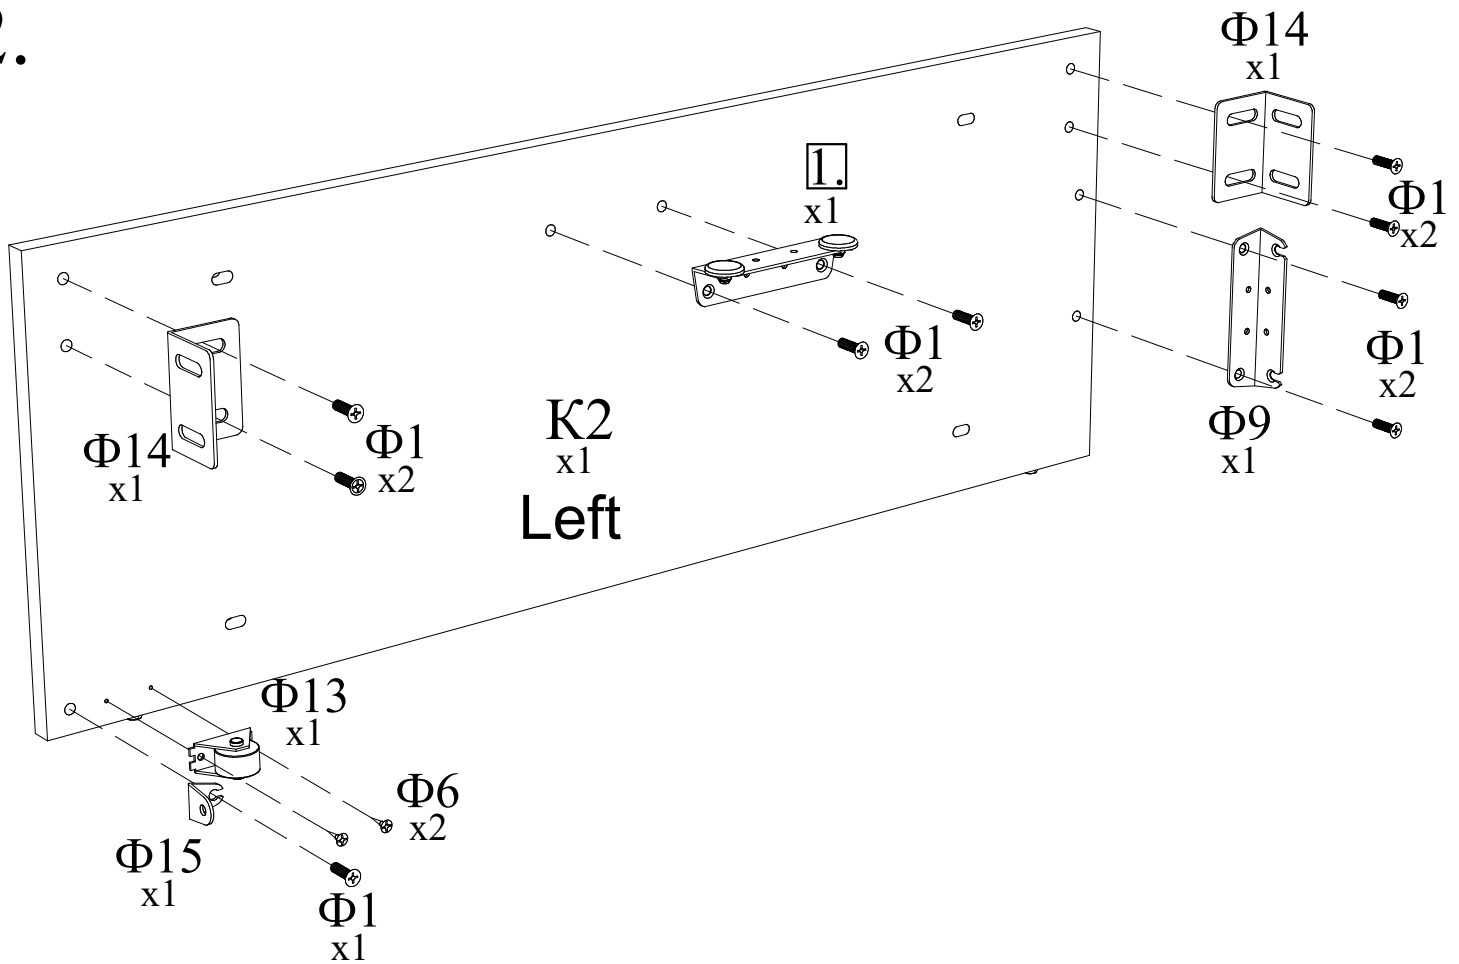


3.

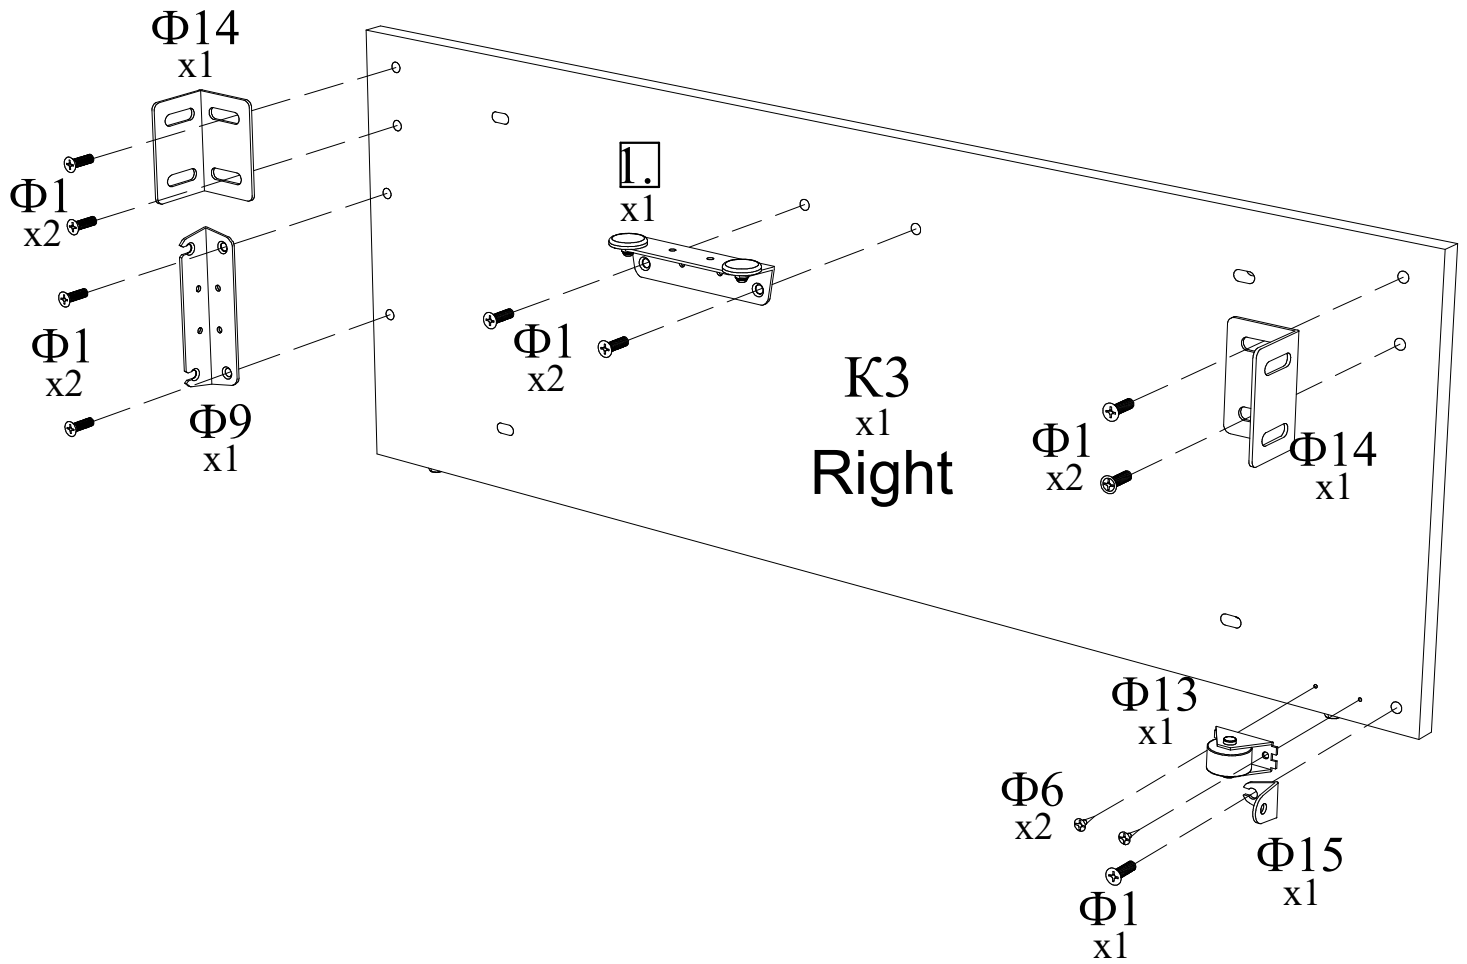


4.

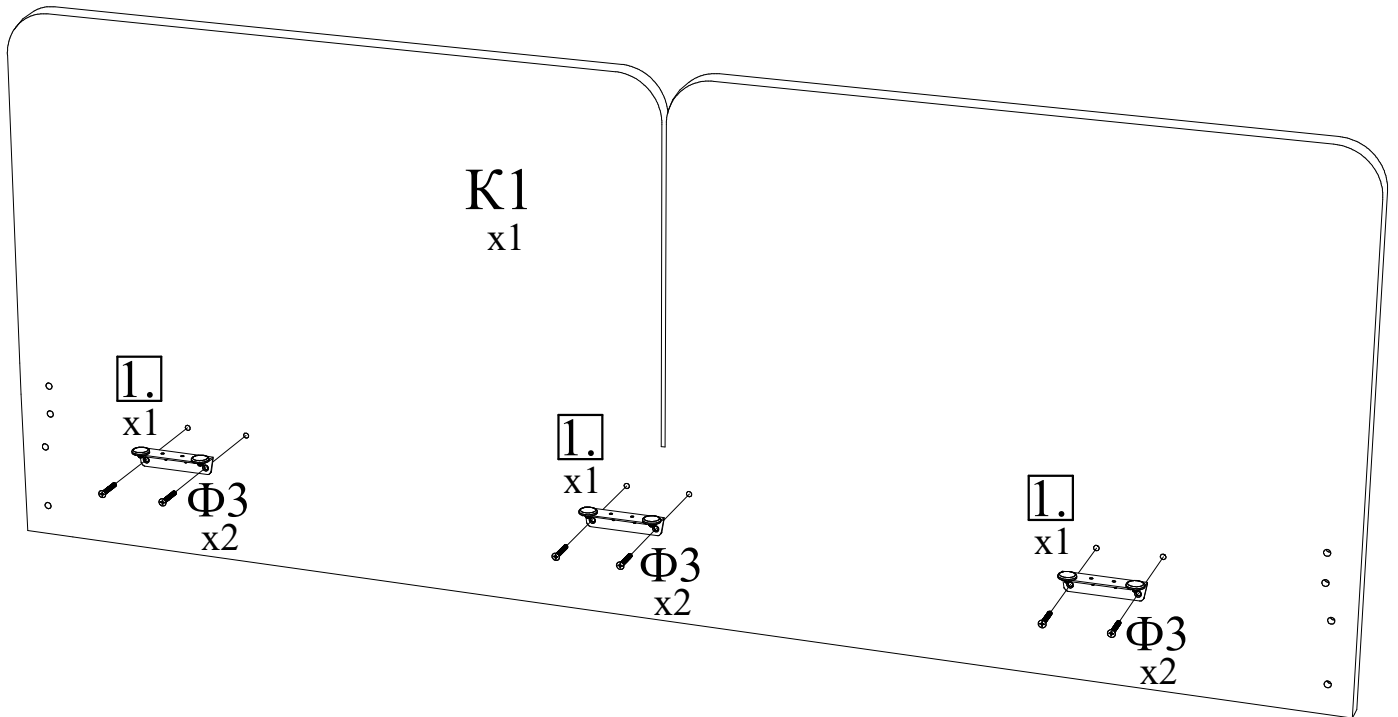


5.

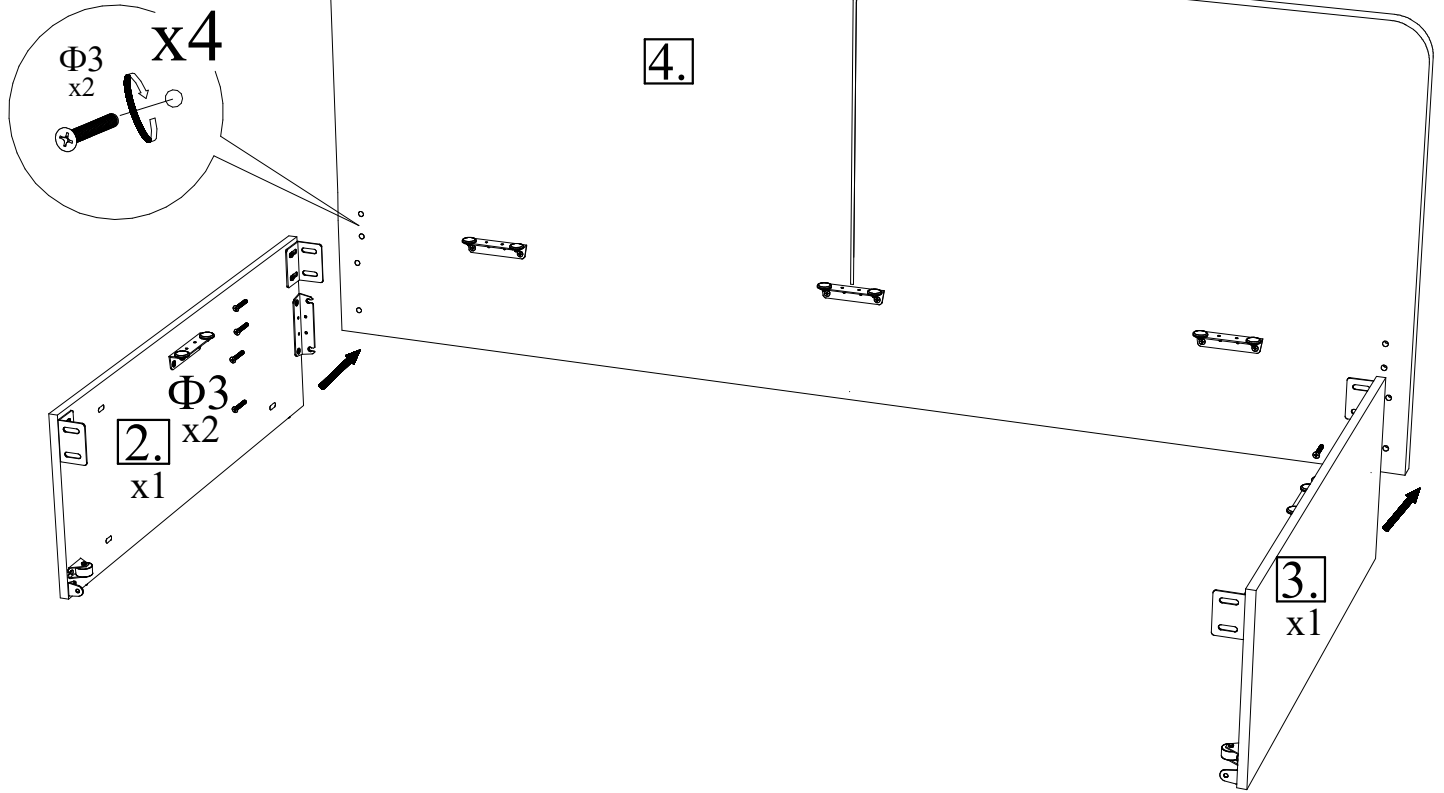


6.

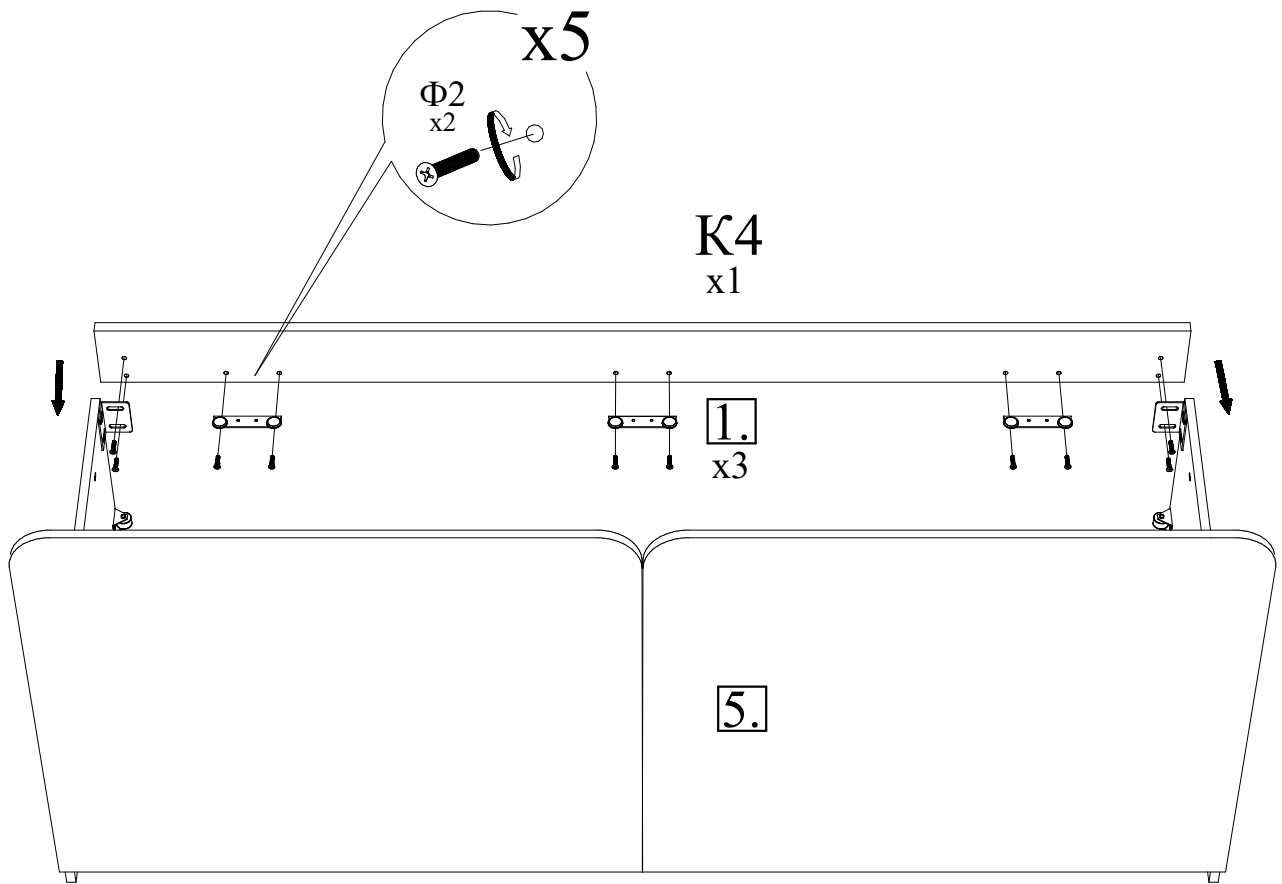


7.

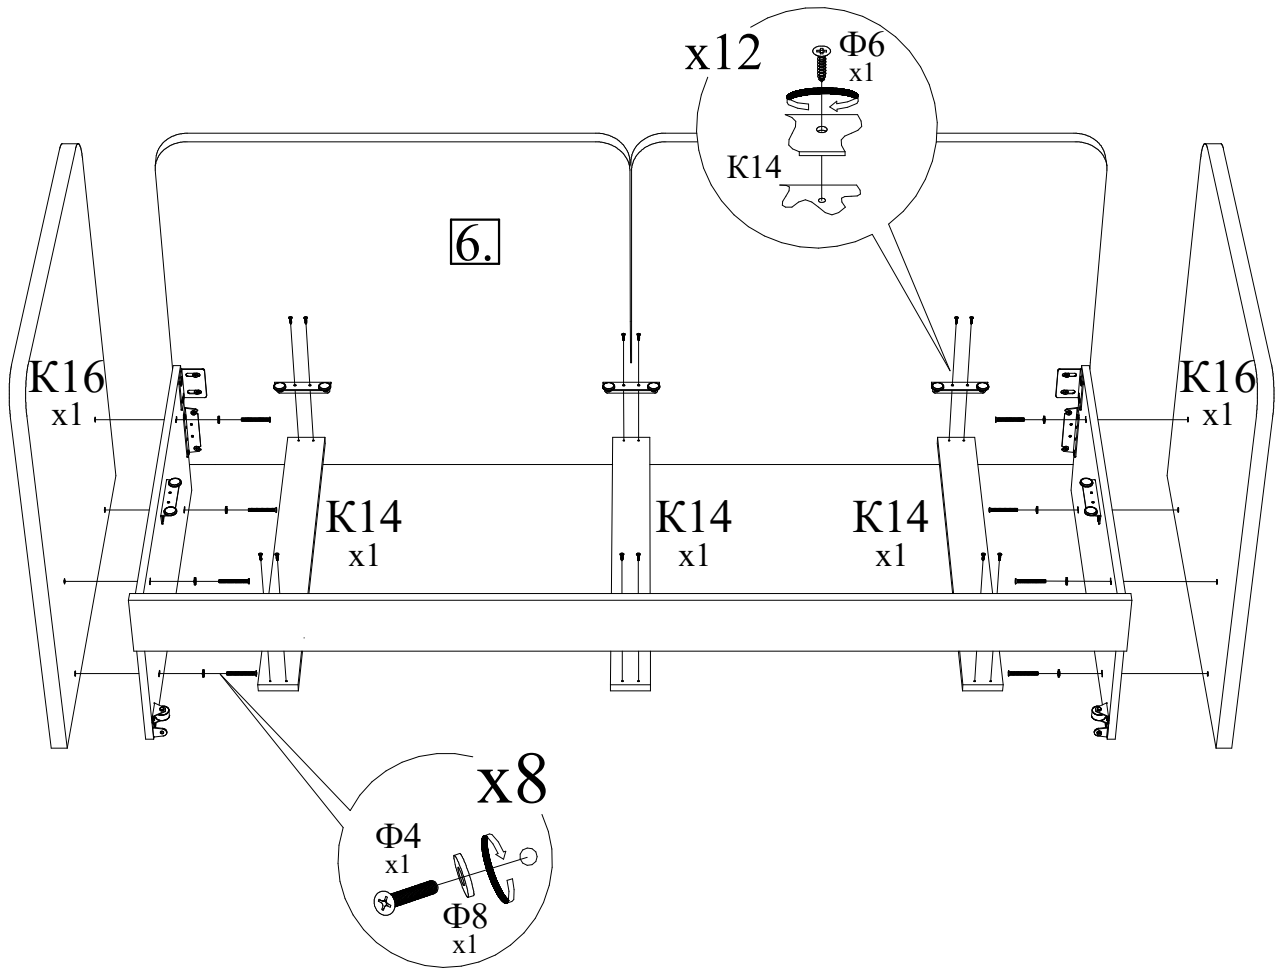


8.

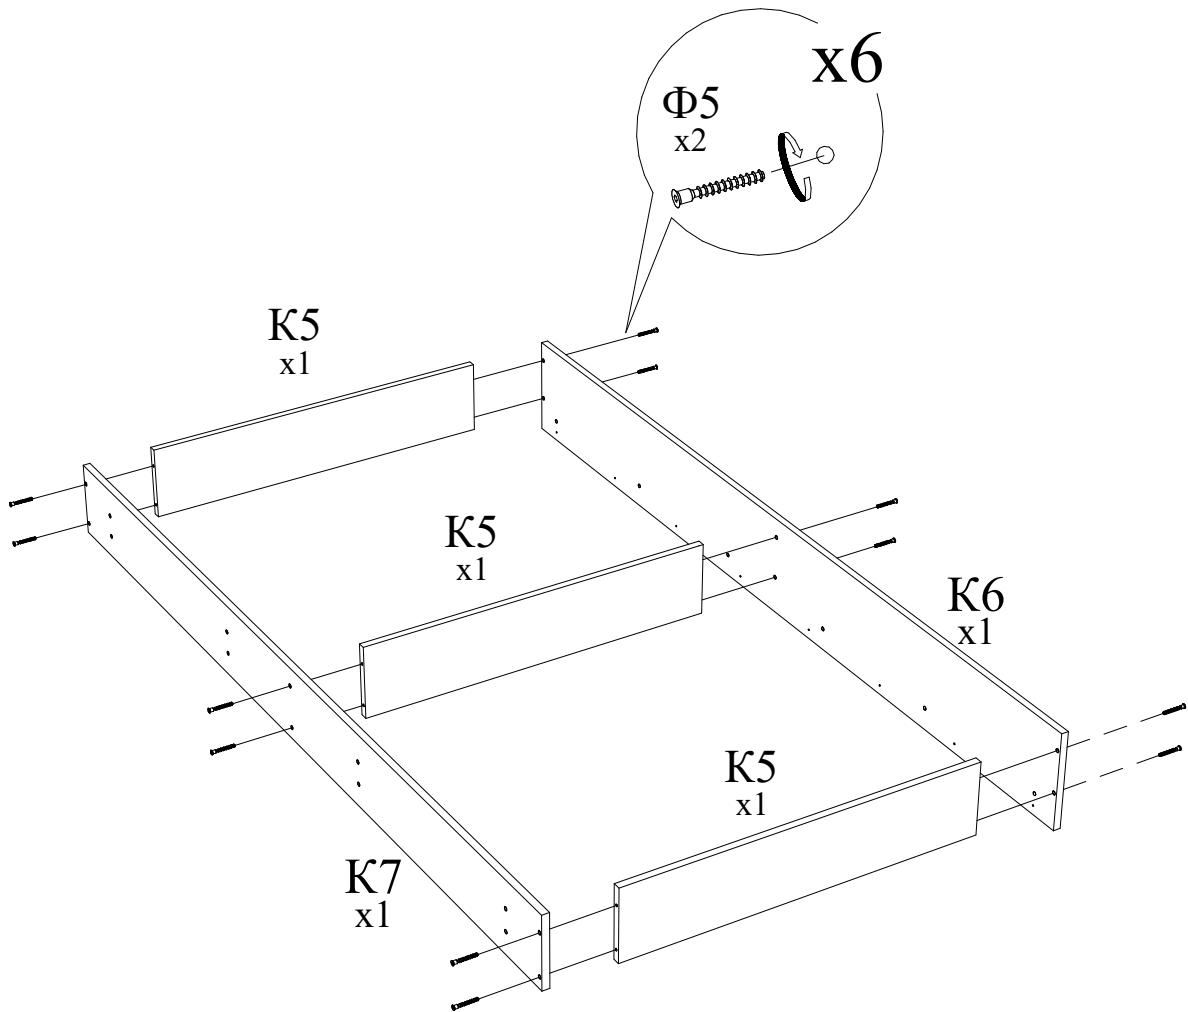


9.

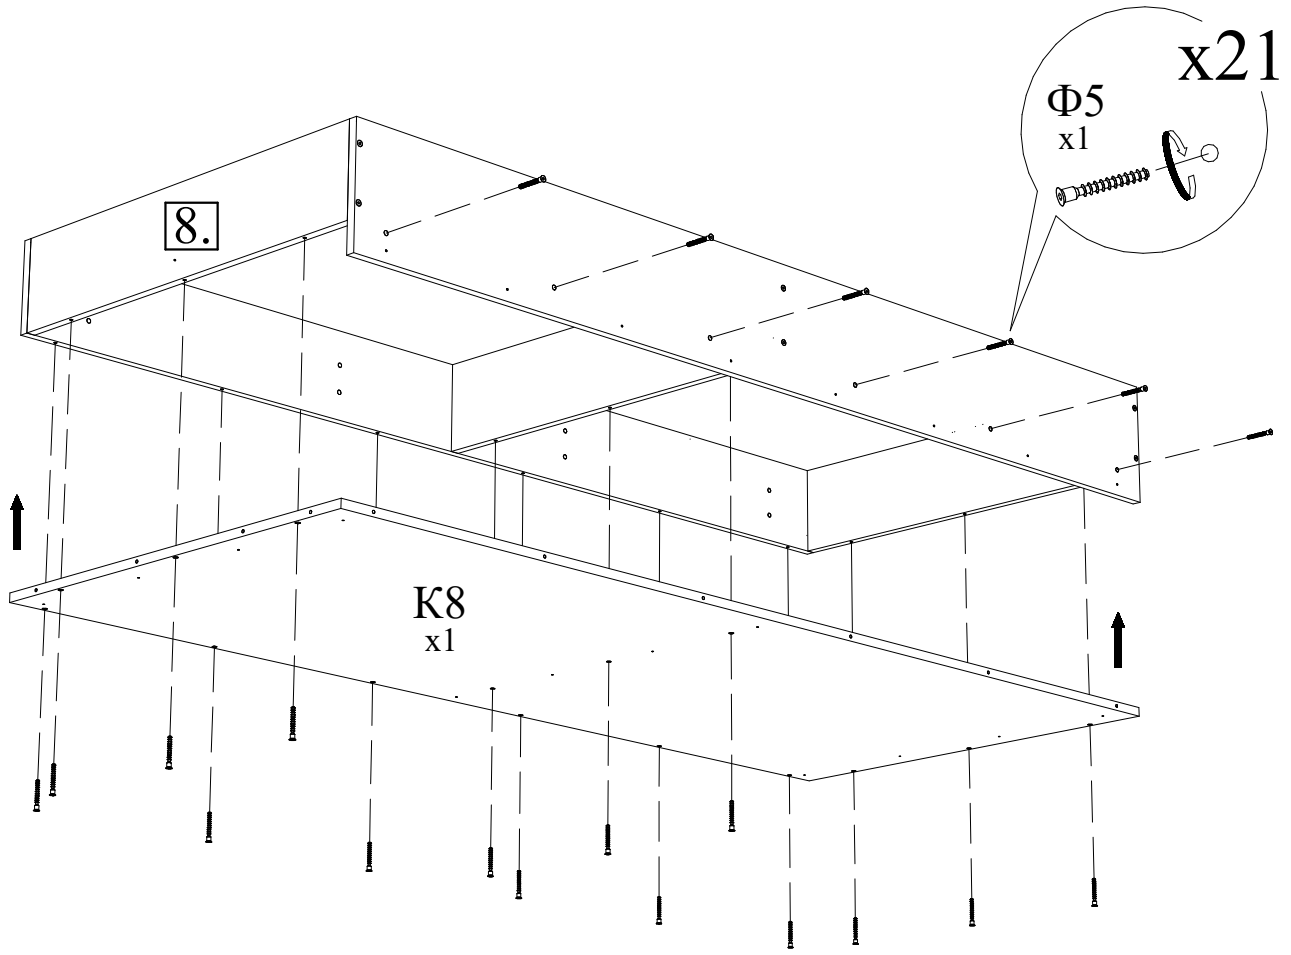


10.

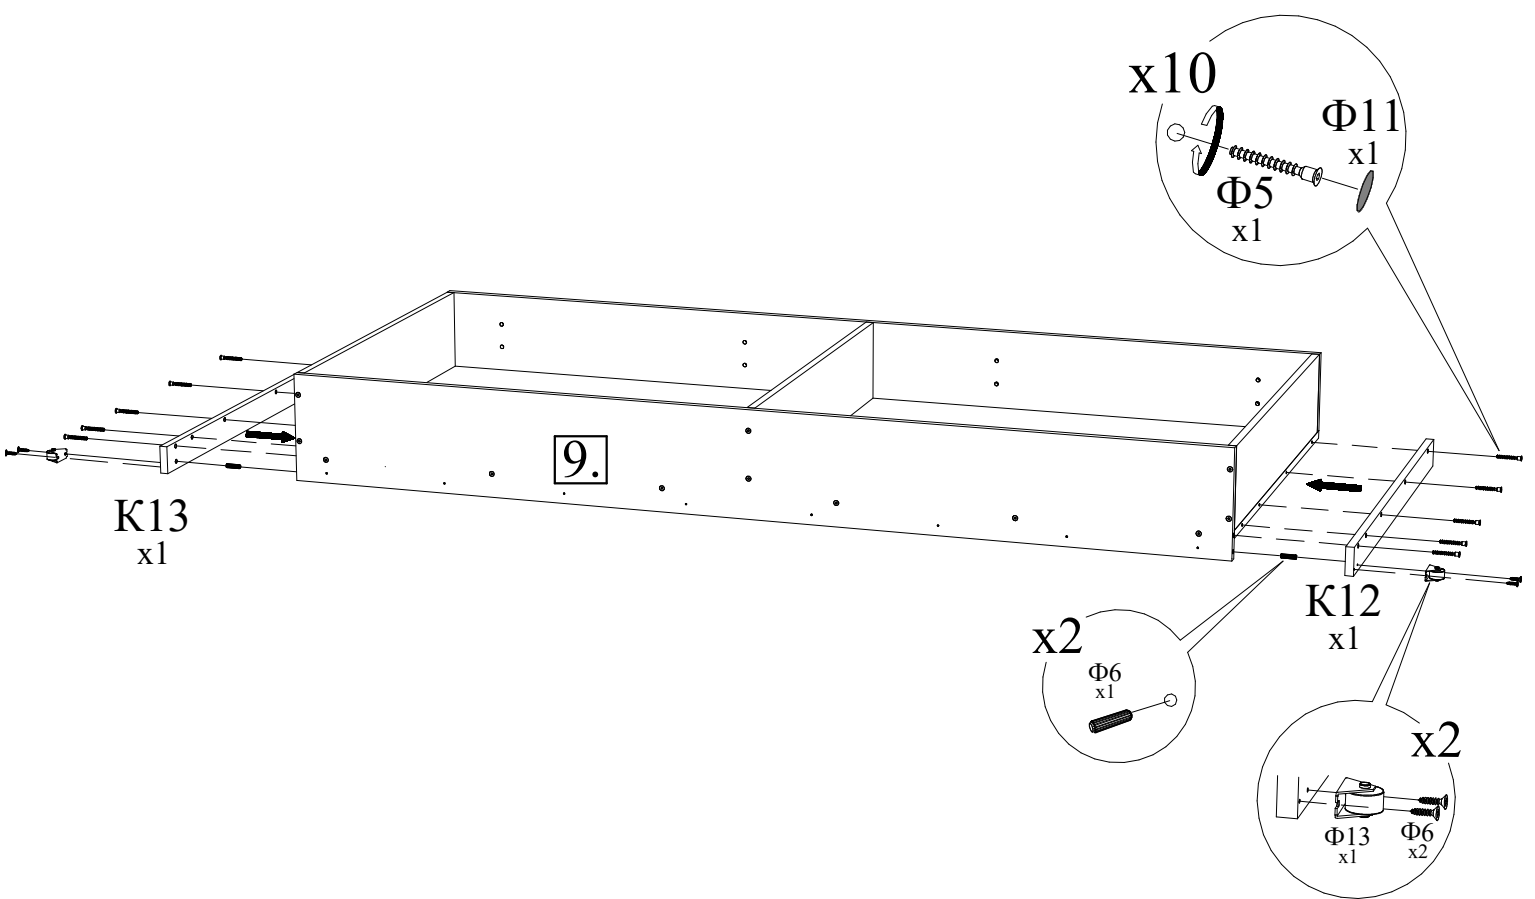


11.

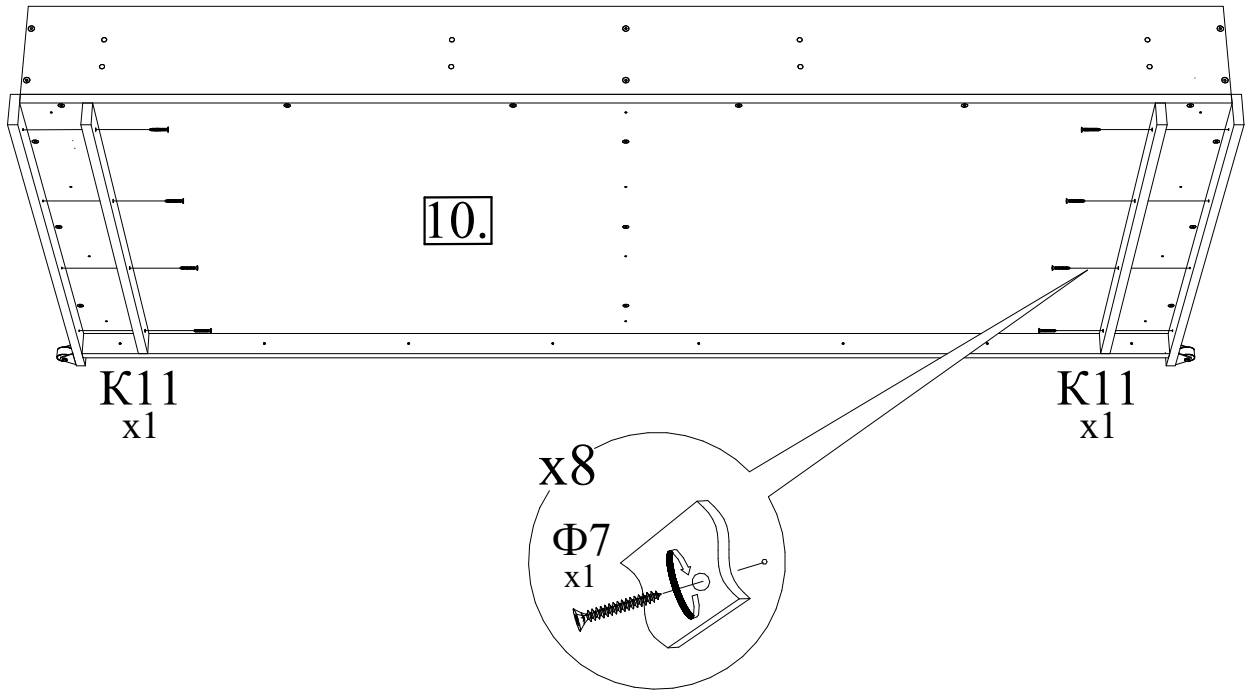


12.

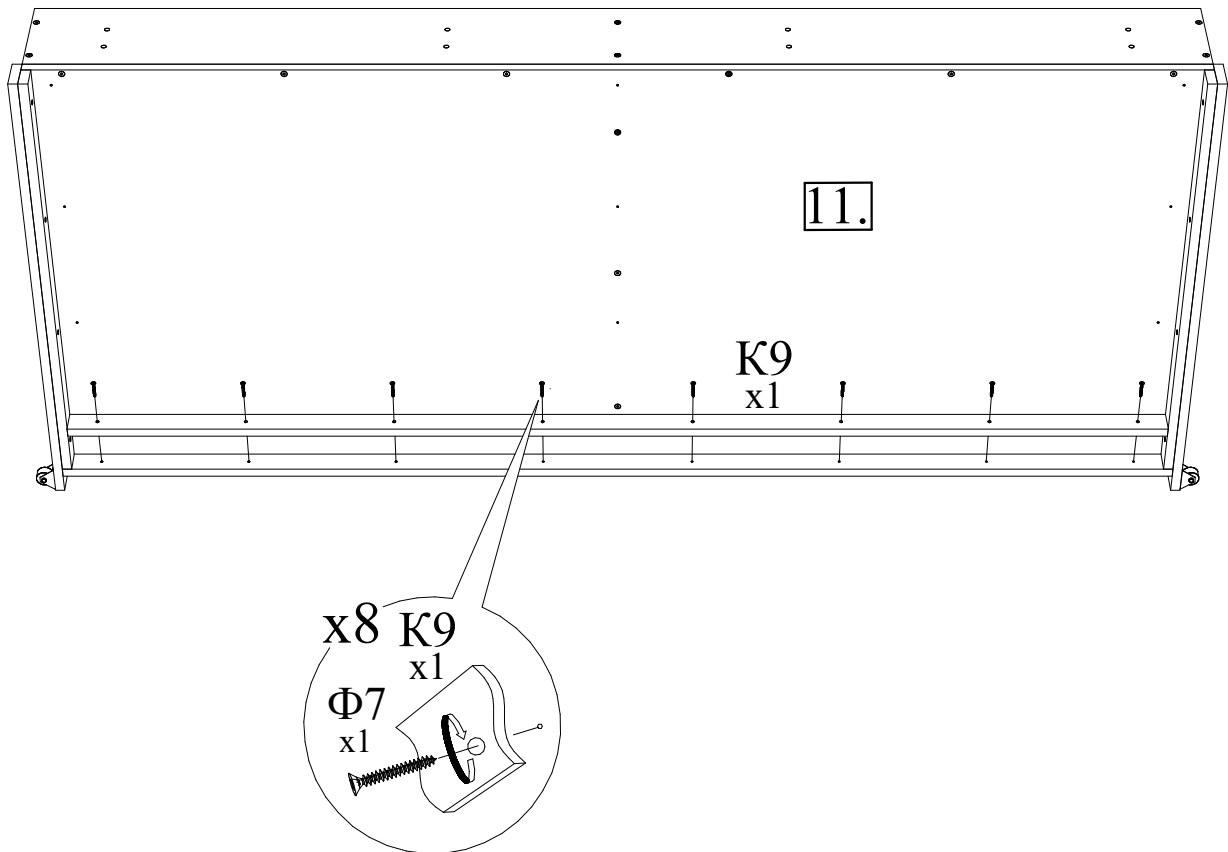


13.

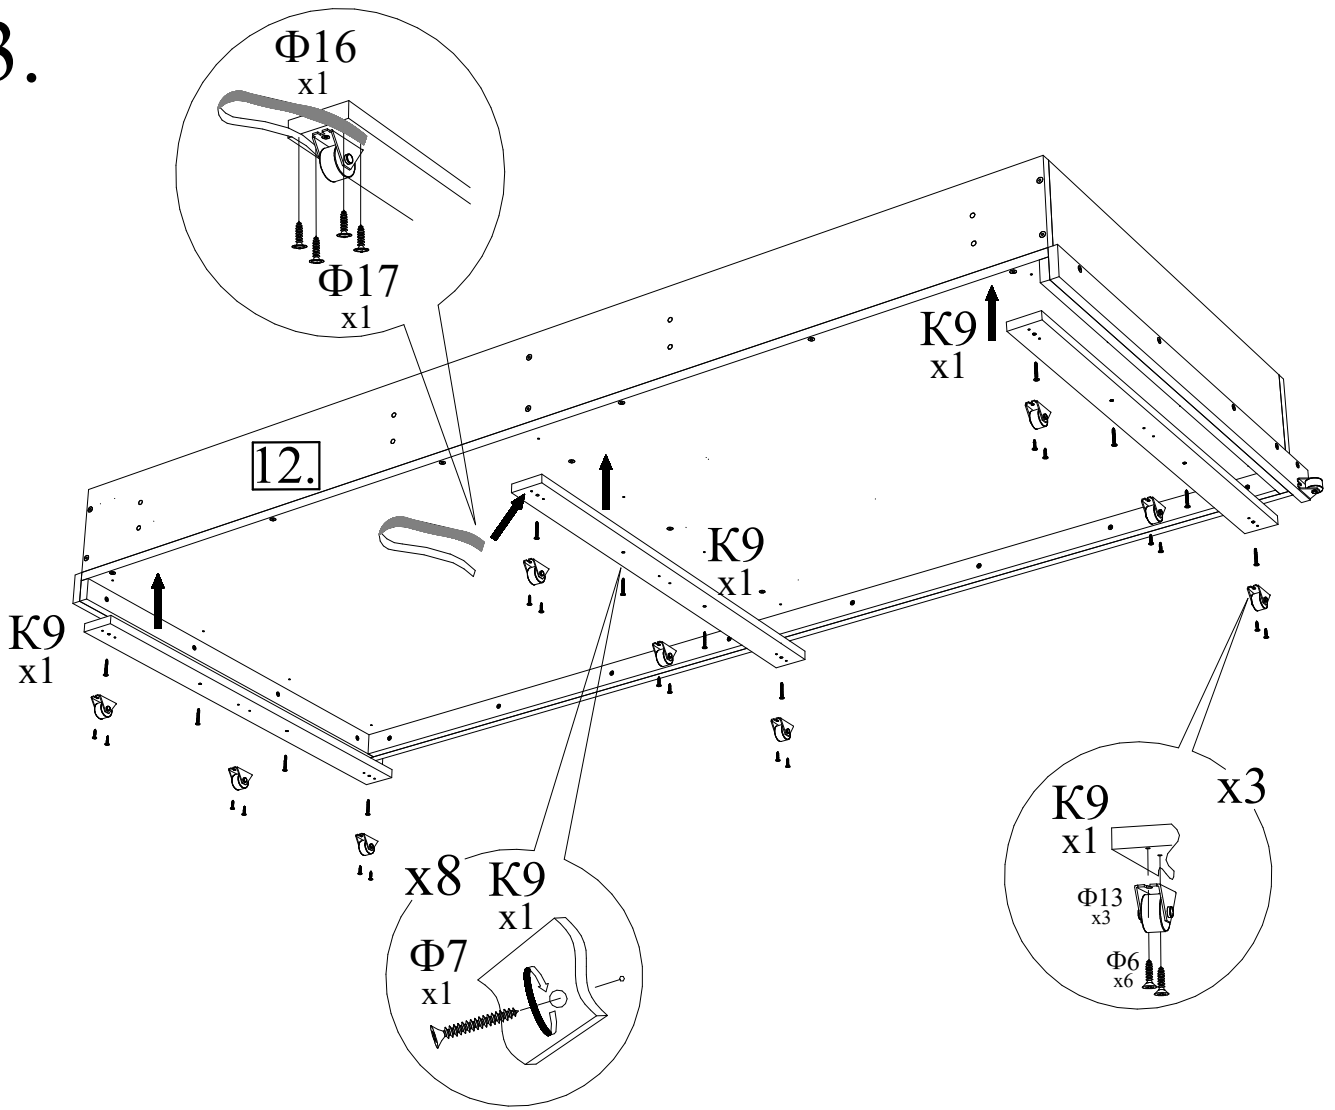

14.

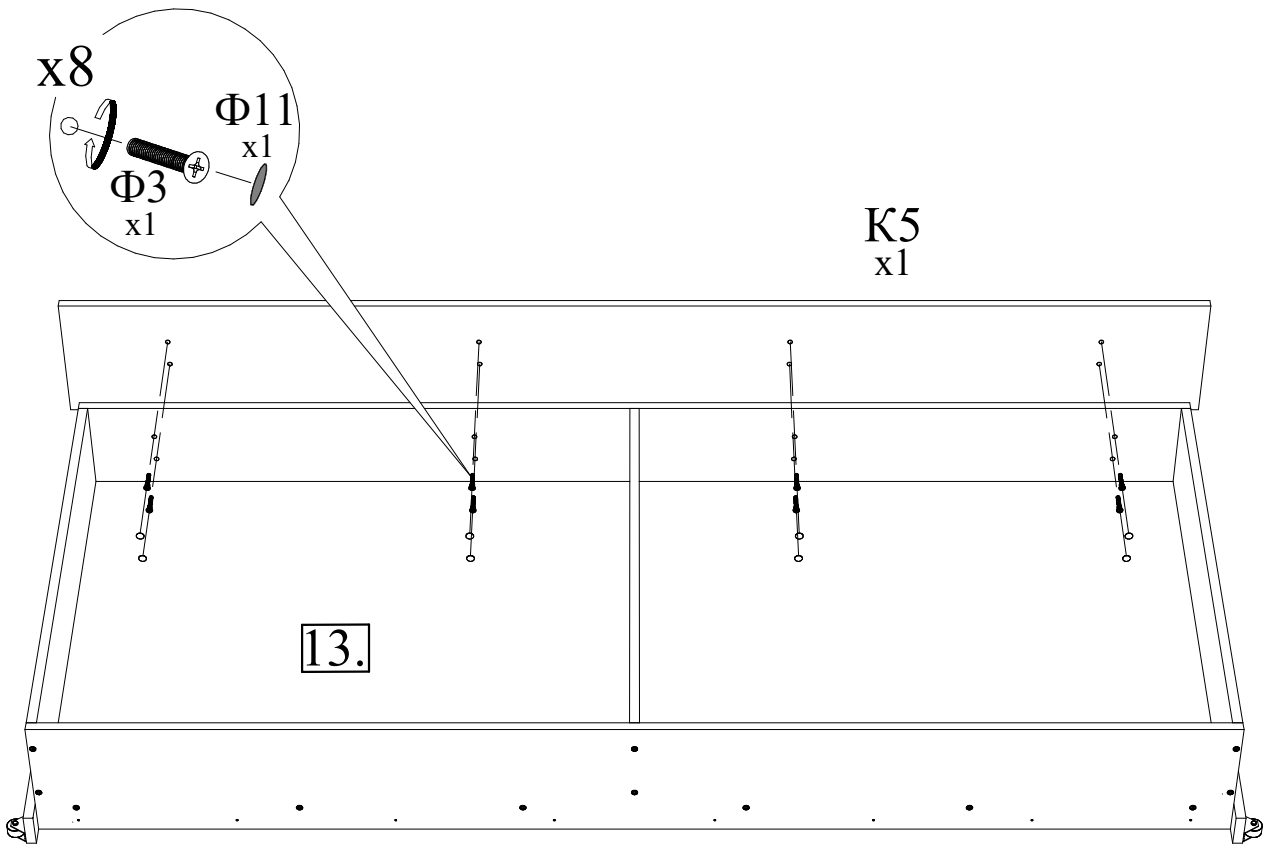

15.

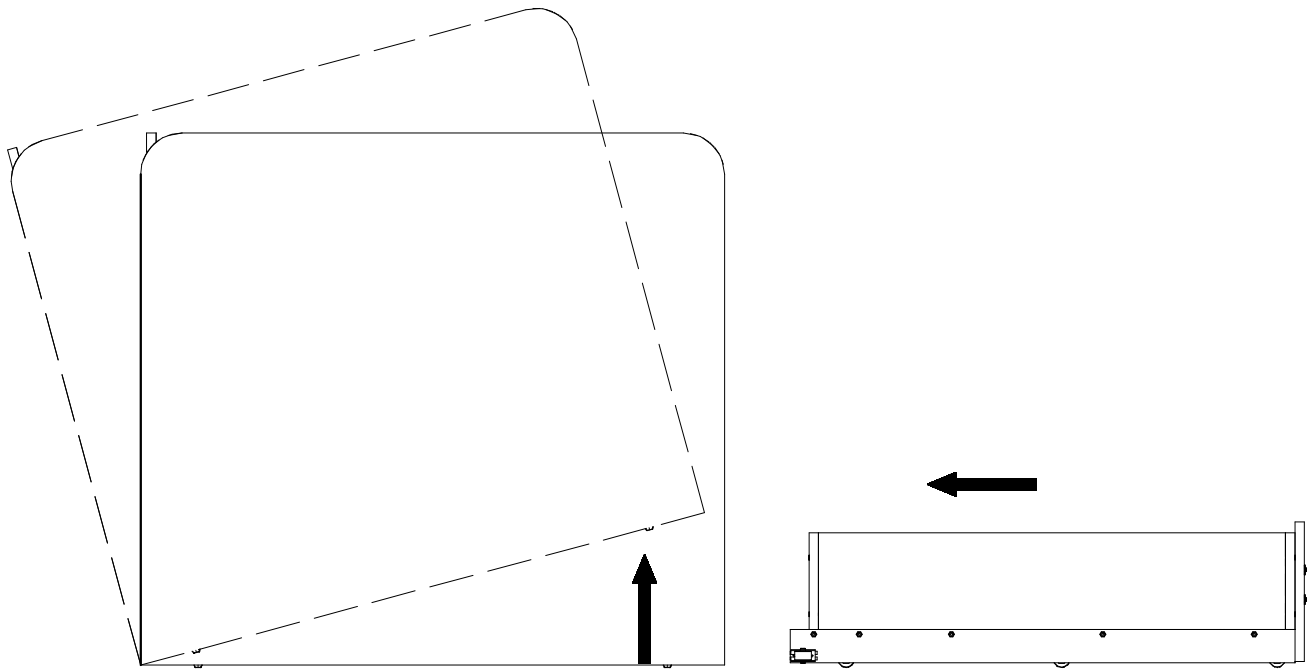

16.

